

Contactors and Starters

34

Table 34-78. Side Mount Auxiliary Contacts for Frame D – R, 40 – 2000A

	Conventional Free Air Thermal Current, I _{th} = I _e , AC-1 in Amps	Poles	Contact Configuration	Circuit Symbol	Pkg. Qty.	Screw Terminals	Spring Cage Terminals	Price U.S. \$
						Catalog Number	Catalog Number	
Frame D – R								
	10	2	1NO-1NC		1	XTCEXSBN11	XTCEXSBN11	
	10	2	1NO _E -1NC _L		1	XTCEXSBLN11 ①	—	
	10	2	1NO-1NC		1	XTCEXSCN11 ②	XTCEXSCNC11 ②	
Frame D – R (Screw Mount)								
	10	2	1NO-1NC		1	XTCEXSBR11	—	
	10	2	1NO _E -1NC _L		1	XTCEXSBLR11	—	
	10	2	1NO-1NC		1	XTCEXSCR11	—	

① 1 early-make contact (1NO_E), 1 late-break contact (1NC_L).
 ② To maintain proper terminal marking, XTCEXSCN_ should not be used with Frame D contactors and only used with Frame F – G contactors in combination with XTCEXSBN_.

Contactors and Starters

34

Table 34-78. Side Mount Auxiliary Contacts for Frame D – R, 40 – 2000A

	Conventional Free Air Thermal Current, I _{th} = I _e , AC-1 in Amps	Poles	Contact Configuration	Circuit Symbol	Pkg. Qty.	Screw Terminals	Spring Cage Terminals	Price U.S. \$
						Catalog Number	Catalog Number	
Frame D – R								
	10	2	1NO-1NC		1	XTCEXSBN11	XTCEXSBN11	
	10	2	1NO _E -1NC _L		1	XTCEXSBLN11 ①	—	
	10	2	1NO-1NC		1	XTCEXSCN11 ②	XTCEXSCNC11 ②	
Frame D – R (Screw Mount)								
	10	2	1NO-1NC		1	XTCEXSBR11	—	
	10	2	1NO _E -1NC _L		1	XTCEXSBLR11	—	
	10	2	1NO-1NC		1	XTCEXSCR11	—	

① 1 early-make contact (1NO_E), 1 late-break contact (1NC_L).
 ② To maintain proper terminal marking, XTCEXSCN_ should not be used with Frame D contactors and only used with Frame F – G contactors in combination with XTCEXSBN_.