

**Contactors and Starters**

**34**

**Table 34-78. Side Mount Auxiliary Contacts for Frame D – R, 40 – 2000A**

	Conventional Free Air Thermal Current, I <sub>th</sub> = I <sub>e</sub> , AC-1 in Amps	Poles	Contact Configuration	Circuit Symbol	Pkg. Qty.	Screw Terminals	Spring Cage Terminals	Price U.S. \$
						Catalog Number	Catalog Number	
<b>Frame D – R</b>								
	10	2	1NO-1NC		1	XTCEXSBN11	XTCEXSBN11	
	10	2	1NO <sub>E</sub> -1NC <sub>L</sub>		1	XTCEXSBLN11 ①	—	
	10	2	1NO-1NC		1	XTCEXSCN11 ②	XTCEXSCNC11 ②	
<b>Frame D – R (Screw Mount)</b>								
	10	2	1NO-1NC		1	XTCEXSBR11	—	
	10	2	1NO <sub>E</sub> -1NC <sub>L</sub>		1	XTCEXSBLR11	—	
	10	2	1NO-1NC		1	XTCEXSCR11	—	

① 1 early-make contact (1NO<sub>E</sub>), 1 late-break contact (1NC<sub>L</sub>).  
 ② To maintain proper terminal marking, XTCEXSCN\_ should not be used with Frame D contactors and only used with Frame F – G contactors in combination with XTCEXSBN\_.

**Contactors and Starters**

**34**

**Table 34-78. Side Mount Auxiliary Contacts for Frame D – R, 40 – 2000A**

	Conventional Free Air Thermal Current, I <sub>th</sub> = I <sub>e</sub> , AC-1 in Amps	Poles	Contact Configuration	Circuit Symbol	Pkg. Qty.	Screw Terminals	Spring Cage Terminals	Price U.S. \$
						Catalog Number	Catalog Number	
<b>Frame D – R</b>								
	10	2	1NO-1NC		1	XTCEXSBN11	XTCEXSBN11	
	10	2	1NO <sub>E</sub> -1NC <sub>L</sub>		1	XTCEXSBLN11 ①	—	
	10	2	1NO-1NC		1	XTCEXSCN11 ②	XTCEXSCNC11 ②	
<b>Frame D – R (Screw Mount)</b>								
	10	2	1NO-1NC		1	XTCEXSBR11	—	
	10	2	1NO <sub>E</sub> -1NC <sub>L</sub>		1	XTCEXSBLR11	—	
	10	2	1NO-1NC		1	XTCEXSCR11	—	

① 1 early-make contact (1NO<sub>E</sub>), 1 late-break contact (1NC<sub>L</sub>).  
 ② To maintain proper terminal marking, XTCEXSCN\_ should not be used with Frame D contactors and only used with Frame F – G contactors in combination with XTCEXSBN\_.