


Deluxe Cord Grip Assembly Instructions

1. Cut cable square. Slide compression nut over cable.
Compress mesh and slide over cable.
2. Slide friction ring and grommet over cable.
3. Secure cord grip body to enclosure.
4. Slide grommet into body, slide friction ring and mesh to lay flat against grommet. **Note:** Cable jacket may have to be stripped back to pass thru body.
5. Tighten compression nut onto body. Remove all slack from mesh by smoothing mesh onto cable.

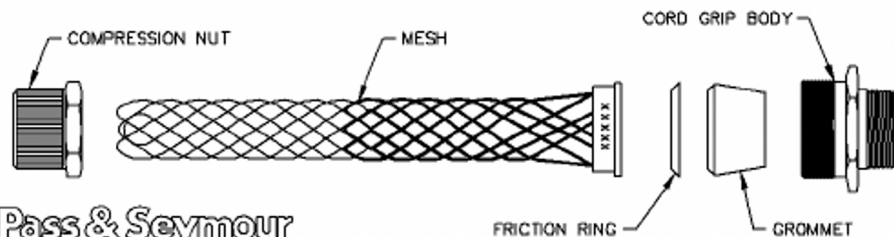

Pass & Seymour
legrand