

Pow-R-Stock^{Plus} quick selector reference guide

Frequently used distribution
and control products available
from distributor stock



EATON

Powering Business Worldwide

Table of contents



Pow-R-Stock panelboards

| | |
|--|----|
| Questions to ask | 5 |
| Catalog numbering | 6 |
| Interiors, EZ Boxes and EZ Trims..... | 8 |
| Branch circuit breakers | 10 |
| Universal main circuit breaker kits— top or bottom mounting | 11 |
| Lug kits and accessories | 13 |



Safety switches/ disconnects

| | |
|------------------------------------|----|
| Questions to ask | 14 |
| Catalog numbering | 15 |
| General-duty safety switches | 16 |
| Heavy-duty safety switches | 17 |
| Safety switch kits | 18 |



Transformers

| | |
|-----------------------------------|----|
| Questions to ask | 19 |
| Catalog numbering | 20 |
| General-purpose transformers..... | 22 |
| Sizing tables | 24 |



Enclosed control

| | |
|--|----|
| Questions to ask | 25 |
| Catalog numbering | 26 |
| NEMA non-combination, non-reversing starters, Type 1 | 26 |
| NEMA combination, non-reversing starters, non-fusible disconnect, Type 1 | 26 |
| NEMA accessories..... | 27 |
| Lighting contactors..... | 28 |



Pushbutton stations and pushbuttons

| | |
|---|----|
| Questions to ask | 29 |
| 30 mm pushbutton stations | 30 |
| 22 mm pushbutton stations | 30 |
| Individually packaged 30 mm pushbuttons and operators..... | 31 |



Manual starters

- Questions to ask 32
- Manual motor switches without overload 33
- Single-phase manual starter with overload protection 33
- Single- and three-phase manual starters with
overload protection 33

Questions to ask

Step 1

1

Select an interior

Q What is your voltage?

A — 120/240 V single-phase, three-wire
— 208Y/120 V three-phase, four-wire
— 480Y/277 V three-phase, four-wire

Q What is your busbar rating?

A — 100 A (aluminum or copper)
— 225 A (aluminum or copper)
— 400 A (aluminum or copper)
— 600 A (aluminum or copper)

Q What is the number of branch circuits/poles?

A — 18
— 30
— 42

Step 2

2

Enclosure type

Q What enclosure is required?

A — NEMA® 1 indoor
— NEMA 3R outdoor

Step 3

3

Trim type

Q For NEMA 1 indoor panels, will the panel be mounted recessed in the wall or mounted directly to the wall?

A — Flush
— Surface

Step 4

4

Q What is the cable entry locations for the incoming feeder?

A — Top
— Bottom

Step 5

5


Main device

Q Main lugs only (MLO) or main circuit breaker?


A — MLO
— MCB (choose amperage and top or bottom)

Pow-R-Stock panelboards (unassembled)

Catalog numbering system— Pow-R-Stock panelboard interiors

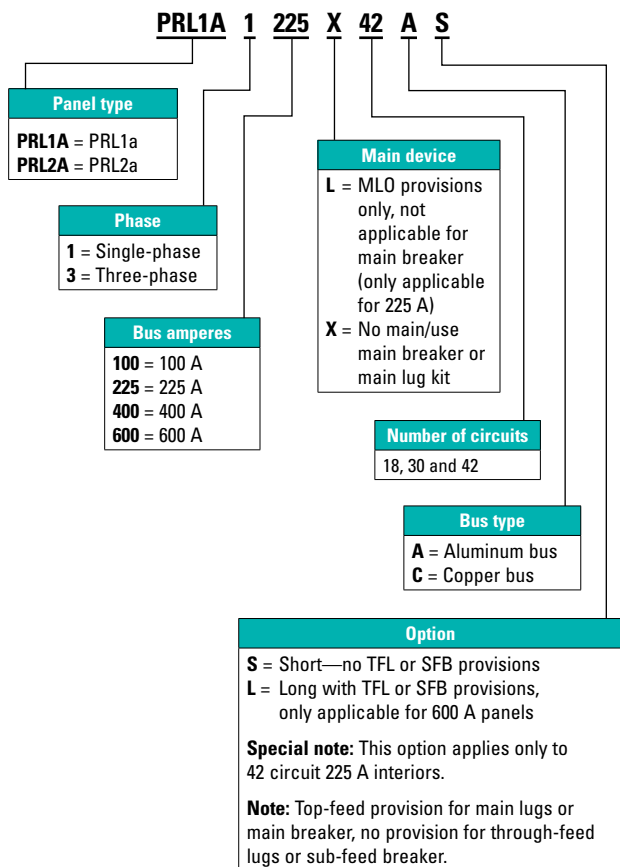

Catalog numbering system— EZ Panel factory-assembled stock panelboards

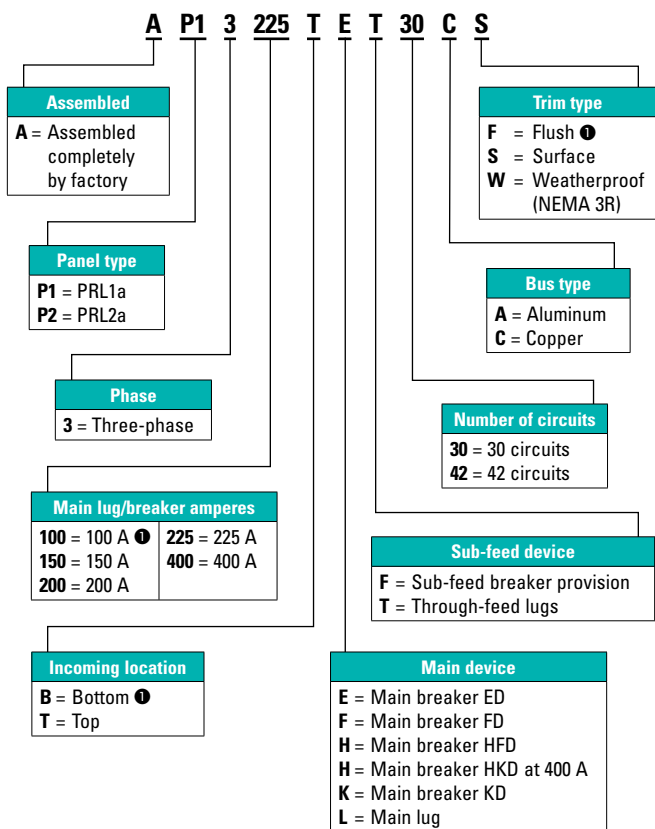

ⓘ These items are not part of the initial launch. Please consult VISTA or your Eaton sales engineer for product availability.

Notes: Not all combinations may be valid. Please verify availability of catalog number created. Refer to PA014007EN for more information on the EZ Panel.

Pow-R-Stock panelboards—EZ™ Boxes and EZ Trims

| Ampere rating | Max. number of poles | Capability | | | | Catalog numbers | |
|---|----------------------|------------|--------------|-------------------|--|------------------------------|------------------|
| | | Main lugs | Main breaker | Through-feed lugs | Sub-feed breaker (225 A max.) | Interiors (less main device) | Aluminum bus |
| | | | | | | | |
| Single-phase, three-wire 120/240 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | | PRL1A1100X18A |
| 100 | 30 | ■ | ■ | ■ | 100 | | PRL1A1100X30A |
| 100 | 42 | ■ | ■ | ■ | N/A | | PRL1A1100X42A |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A1225X30A |
| 225 | 42 | ■ | ■ | N/A | N/A | | PRL1A1225X42AS ❶ |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A1225X42A |
| 400 | 42 | ■ | ■ | N/A | N/A | | PRL1A1400X42AS ❶ |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A1400X42A |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |
| Three-phase, four-wire 208Y/120 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | | PRL1A3100X18A |
| 100 | 30 | ■ | ■ | ■ | 100 | | PRL1A3100X30A |
| 100 | 42 | ■ | ■ | ■ | N/A | | PRL1A3100X42A |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A3225X30A |
| 225 | 42 | ■ | N/A | N/A | N/A | | PRL1A3225L42AS ❶ |
| 225 | 42 | ■ | ■ | N/A | N/A | | PRL1A3225X42AS ❶ |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A3225X42A |
| 400 | 42 | ■ | ■ | N/A | N/A | | PRL1A3400X42AS ❶ |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL1A3400X42A |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |
| Three-phase, four-wire 480Y/277 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | | PRL2A3100X18A |
| 100 | 30 | ■ | ■ | ■ | 100 | | PRL2A3100X30A |
| 100 | 42 | ■ | ■ | ■ | N/A | | PRL2A3100X42A |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL2A3225X30A |
| 225 | 42 | ■ | N/A | N/A | N/A | | PRL2A3225L42AS ❶ |
| 225 | 42 | ■ | ■ | N/A | N/A | | PRL2A3225X42AS ❶ |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL2A3225X42A |
| 400 | 42 | ■ | ■ | N/A | N/A | | PRL2A3400X42AS ❶ |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | | PRL2A3400X42A |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |

❶ S = Short—no TFL or SFB provisions.

| Copper bus | Boxes | Trims (NEMA 1) | | NEMA 3R enclosures |
|------------------|----------|----------------|----------|--------------------|
| | NEMA 1 | Surface | Flush | |
| PRL1A1100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL1A1100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A1400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A1400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A1600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A1600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |
| PRL1A3100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL1A3100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225L42CS ① | EZB2042R | EZT2042S | EZT2042F | GWPBQ2042PR |
| PRL1A3225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A3400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A3400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A3600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A3600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |
| PRL2A3100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL2A3100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225L42CS ① | EZB2042R | EZT2042S | EZT2042F | GWPBQ2042PR |
| PRL2A3225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL2A3400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL2A3400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL2A3600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL2A3600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |

Note: The colors shown in the tables correspond to the color coding on the trim, interior and box product packaging labels. Be sure that all three parts match when delivering to your customer.

Note: Distributors can purchase boxes in quantities via the Distributor toolbox.

Branch circuit breakers

Summary of branch breakers available

| Breaker | No. of poles | Ampere rating | Voltage | kAIC rating | Example | Panel type |
|---------|--------------|---------------|----------|-------------|--------------------|------------|
| BAB ①② | 1 | 15–70 | 120 | 10 | BAB1020 | PRL1a |
| | 2 | 15–100 | 120/240 | 10 | BAB2020 | PRL1a |
| | 2 | 15–100 | 240 | 10 | BAB2040H | PRL1a |
| | 3 | 15–100 | 240 | 10 | BAB3030H | PRL1a |
| QBAF | 1 | 15–20 | 120 | 10 | QBAF1020 | PRL1a |
| QBHAF | 1 | 15–20 | 120 | 22 | QBHAF1020 | PRL1a |
| QBCAF | 1 | 15–20 | 120 | 10 | QBCAF1020 | PRL1a |
| QBHCAF | 1 | 15–20 | 120 | 22 | QBHCAF1020 | PRL1a |
| QBGFT | 1 | 15–40 | 120 | 10 | QBGFT1020 | PRL1a |
| | 2 | 15–50 | 120/240 | 10 | QBGFT2040 | PRL1a |
| QBHGFT | 1 | 15–30 | 120 | 22 | QBHGFT1020 | PRL1a |
| | 2 | 15–30 | 120/240 | 22 | QBHGFT2020 | PRL1a |
| QBGFEP | 1 | 15–40 | 120 | 10 | QBGFEP1020 | PRL1a |
| | 2 | 15–50 | 120/240 | 10 | QBGFEP2020 | PRL1a |
| QBHGFEF | 1 | 15–30 | 120 | 22 | QBHGFEF1020 | PRL1a |
| | 2 | 15–30 | 120/240 | 22 | QBHGFEF2020 | PRL1a |
| QBHW ① | 1 | 15–70 | 120 | 22 | QBHW1020 | PRL1a |
| | 2 | 15–100 | 120/240 | 22 | QBHW2020 | PRL1a |
| | 2 | 15–100 | 240 | 22 | QBHW2040H | PRL1a |
| | 3 | 15–100 | 240 | 22 | QBHW3030H | PRL1a |
| GHQ ① | 1 | 15–20 | 277 | 14 | GHQ1020 | PRL2a |
| GHB ①② | 1 | 15–100 | 277 | 14 | GHB1020 | PRL2a |
| | 2 | 15–100 | 480Y/277 | 14 | GHB2040 | PRL2a |
| | 3 | 15–100 | 480Y/277 | 14 | GHB3060 | PRL2a |

① BAB, QBHW, GHQ and GHB breakers installed in PRL1a and PRL2a are available with shunt trip, i.e., BAB1020S.

② BAB-H and GHB 50–100 A available as chassis-mounted main device.

Universal main circuit breaker kits— top or bottom mounting

Kits—main circuit breaker (includes circuit breaker and terminals)

| Max. volt. | Ampere rating | Service | Breaker frame | Mounting location | Wire range Al/Cu (in kcmil) | Catalog number |
|------------|---------------|------------------------|---------------|-------------------|-----------------------------|-----------------|
| 240 Vac | 100 | Single- or three-phase | ED | Universal | (1) #14–1/0 | BKED100 |
| | 125 | Single- or three-phase | ED | Universal | (1) #4–4/0 | BKED125 |
| | 150 | Single- or three-phase | ED | Universal | (1) #4–4/0 | BKED150 |
| | 175 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED175 |
| | 200 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED200 |
| | 225 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED225 |
| 480 Vac | 100 | Single- or three-phase | FD | Universal | (1) #14–1/0 | BKFD100 |
| | 110 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD110 |
| | 125 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD125 |
| | 150 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD150 |
| | 175 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD175 |
| | 200 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD200 |
| | 225 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD225 |
| 480 Vac | 100 | Single- or three-phase | HFD | Universal | (1) #14–1/0 | BKHFD100 |
| | 110 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD110 |
| | 125 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD125 |
| | 150 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD150 |
| | 175 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD175 |
| | 200 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD200 |
| | 225 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD225 |
| 480 Vac | 250 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD250 |
| | 300 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD300 |
| | 350 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD350 |
| | 400 | Single- or three-phase | KD | Universal | (2) 3/0–250 or (1) 3/0–500 | BKKD400 |

① Order optional lug kit catalog no. 3TA225FDK for 175–225 A ED- and FD-Frame three-pole circuit breakers to provide terminations for (1) #6–300 kcmil.

Note: KD kits are to be used on 400 A and 600 A panels only.

Universal main circuit breaker kits— top or bottom mounting

Kits—main circuit breaker (includes circuit breaker and terminals)

| Max. volt. | Ampere rating | Service | Breaker frame | Mounting location | Wire range Al/Cu (in kcmil) | Catalog number |
|------------|---------------|------------------------|---------------|-------------------|-----------------------------|-----------------|
| 480 Vac | 250 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD250 |
| | 300 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD300 |
| | 350 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD350 |
| | 400 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD400 |
| 480 Vac | 400 | Single- or three-phase | LG | Universal | (1) #2–500 | BKLGE400 |
| | 500 | Single- or three-phase | LG | Universal | (2) #2–500 | BKLGE500 |
| | 600 | Single- or three-phase | LG | Universal | (2) #2–500 | BKLGE600 |

Lug kits and accessories

Standard main/sub-feed breaker lug capacities

| Ampere rating | Lug wire range Al/Cu |
|---------------|--|
| 100 | (1) #14–1/0 |
| 125–225 | (1) #4–4/0 |
| 250–350 | (1) 250–500 kcmil |
| 400 | (2) 3/0–250 kcmil or (1) 3/0–500 kcmil |

Main/through-feed lug kits

| Ampere rating | Wire range Al/Cu | Catalog number |
|---------------|------------------|------------------|
| 100 | (1) #14–1/0 | LUGKIT100 |
| 225 | (1) #6–300 kcmil | LUGKIT225 |
| 400 | (2) #2–500 kcmil | LUGKIT400 |
| 600 | (2) #2–500 kcmil | LUGKIT600 |

Kits

| Description | Catalog number | | |
|--|----------------------------------|-----------------|-------------------|
| | 100 A | 225 A | 400/600 A |
| Service entrance kit—MLO | SEK1/2 ① | SEK1/2 ① | SEK4/6 ① |
| Service entrance kit—MCB | SEKB ②④ SEKG ③④ | SEKF ④⑤ | SEKKL ④⑥ |
| 200% neutral kit | 2NK100 | 2NK225 | 1NK400 |
| Sub-feed breaker adapter (used to mount 225 A sub-feed breaker in 400 A panels) | — | — | 225ASFBKIT |
| Sub-feed breaker adapter (used to mount 225 A sub-feed breaker in 600 A panels) | — | — | 225BSFBKIT |
| Sub-feed breaker adapter (used to mount 400 A sub-feed breaker in 600 A panels) | — | — | 400ASFBKIT |

① Applicable for use with MLO, SE panels only.

② Only applicable for SE PRL1a with chassis-mounted BAB, QBH main breaker.

③ Only applicable for SE PRL2a with chassis-mounted GHB main breaker.

④ Main breaker panels only—includes barrier kit and bonding jumper.

⑤ To be used with F-frame main breaker.

⑥ To be used with K- and L-frame main breaker.

Accessories

| Description | Catalog number |
|-------------------------|-------------------|
| Isolated ground bar kit | ISOGROUND |
| Copper ground bar kit | CUGROUND |
| 1P filler plate ① | 5155C62H01 |
| Series rating kit ② | SRK |

① Each PRS panel comes with 50% filler plates, e.g., 18 circuit interior contains 9 filler plates.

② Series rating kit includes series rating book and adhesive sleeve and series rating sticker. If panelboard is being series rated higher than the base rating, an SRK is required.

Questions to ask

Step 1

1

Q Which type of switch do you need?

A — Heavy-duty (DH)
— General-duty (DG)
— Double-throw (DT)

Step 2

2

Q What current (ampere) rating do you need?

A — 30, 60, 100, 200, 400, 600, 800, 1200

Step 3

3

Q Should it be fused, non-fused or fusible with neutral?

A — F = Fusible without neutral
— U = Non-fusible
— N = Fusible with neutral

Step 4

4

Q How many poles?

A — 1, 2, 3, 4, 6

Step 5

5

Q Choose the maximum circuit voltage.

A — 240 Vac
— 600 Vac

Step 6


6

Q What type of enclosure do you need?

A — NEMA 1
— NEMA 3R
— NEMA 12
— NEMA 4 painted steel
— NEMA 4X stainless steel
— NEMA 4X non-metallic

Safety switches/ disconnects

Catalog numbering system—safety switches

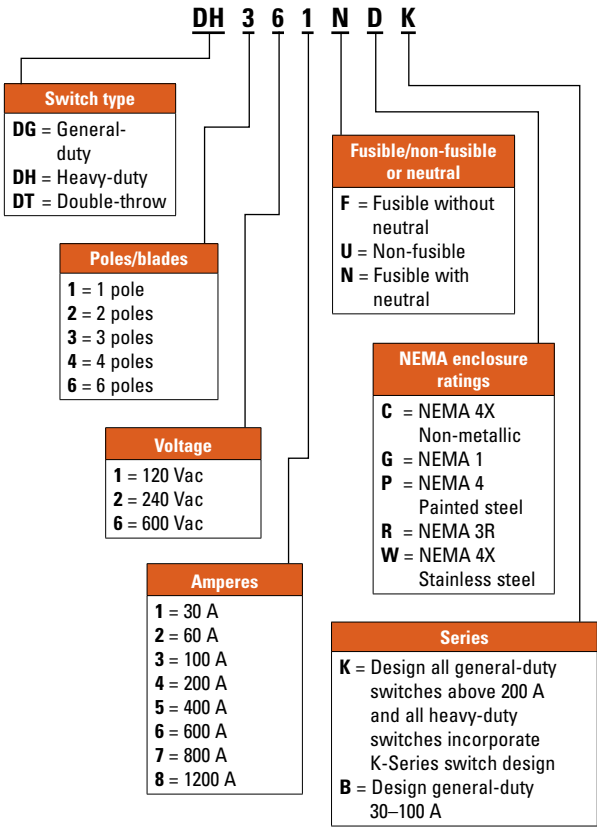

General-duty safety switches (disconnects)

Two-pole—240 Vac (suitable for service entrance use with a neutral or ground kit)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings | | Catalog number |
|-----------------------|----------------------|----------------|-----------------|---------|----------------|
| | | | Single-phase | | |
| | | | 120 Vac | 240 Vac | |
| 30 | Fusible with neutral | NEMA 1 | | 1.5–3 | DG221NGB |
| 30 | Non-fusible | NEMA 1 | 2 | 3 | DG221UGB |
| 30 | Fusible with neutral | NEMA 3R | | 1.5–3 | DG221NRB |
| 30 | Non-fusible | NEMA 3R | 2 | 3 | DG221URB |
| 60 | Fusible with neutral | NEMA 1 | | 3–10 | DG222NGB |
| 60 | Non-fusible | NEMA 1 | 3 | 10 | DG222UGB |
| 60 | Fusible with neutral | NEMA 3R | | 3–10 | DG222NRB |
| 60 | Non-fusible | NEMA 3R | 1 | 10 | DG222URB |
| 100 | Fusible with neutral | NEMA 1 | | 7.5–15 | DG223NGB |
| 100 | Non-fusible | NEMA 1 | | 15 | DG223UGB |
| 100 | Fusible with neutral | NEMA 3R | | 7.5–15 | DG223NRB |
| 100 | Non-fusible | NEMA 3R | | 15 | DG223URB |

Three-pole—240 Vac (suitable for service entrance use with a neutral or ground lug kit)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings ^① | | Catalog number |
|-----------------------|----------------------|----------------|------------------------------|-------------|----------------|
| | | | Single-phase | Three-phase | |
| | | | 240 Vac | 240 Vac | |
| 30 | Fusible with neutral | NEMA 1 | 1.5–3 | 3–7.5 | DG321NGB |
| 30 | Non-fusible | NEMA 1 | 3 | 7.5 | DG321UGB |
| 30 | Fusible with neutral | NEMA 3R | 1.5–3 | 3–7.5 | DG321NRB |
| 30 | Non-fusible | NEMA 3R | 3 | 7.5 | DG321URB |
| 60 | Fusible with neutral | NEMA 1 | 3–10 | 7.5–15 | DG322NGB |
| 60 | Non-fusible | NEMA 1 | 10 | 15 | DG322UGB |
| 60 | Fusible with neutral | NEMA 3R | 3–10 | 7.5–15 | DG322NRB |
| 60 | Non-fusible | NEMA 3R | 10 | 15 | DG322URB |
| 100 | Fusible with neutral | NEMA 1 | 7.5–15 | 15–30 | DG323NGB |
| 100 | Non-fusible | NEMA 1 | 15 | 30 | DG323UGB |
| 100 | Fusible with neutral | NEMA 3R | 7.5–15 | 15–30 | DG323NRB |
| 100 | Non-fusible | NEMA 3R | 15 | 30 | DG323URB |

^① Maximum hp ratings for fusible units apply only when dual element time-delay fuses are used.

Neutral and ground lug kits

| Description | Catalog number |
|--------------------------------------|----------------|
| Neutral kit for 30 A switches | DG030NB |
| Neutral kit for 60–100 A switches | DG100NB |
| Ground lug kit for 30–100 A switches | DG030GB |

Class R fuse adapter kits

| Ampere rating | Type | Voltage | Catalog number |
|---------------|--------------|---------|----------------|
| 30 | General-duty | 240 | DG30RB |
| 60 | General-duty | 240 | DS16FK |
| 100 | General-duty | 240 | DG100RB |

Heavy-duty safety switches (disconnects)

Three-pole—480–600 Vac (suitable for service entrance use with a neutral or ground lug kit below)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings | | | | Catalog number |
|-----------------------|-------------|----------------|-----------------|-------|-------------|-------|-------------------|
| | | | Single-phase | | Three-phase | | |
| | | | 480 V | 600 V | 480 V | 600 V | |
| 30 | Fusible | NEMA 1 | 7.5 | 15 | 10 | 20 | DH361FGK ❶ |
| 30 | Non-fusible | NEMA 1 | 7.5 | 15 | 10 | 20 | DH361UGK |
| 30 | Fusible | NEMA 3R | 7.5 | 15 | 10 | 20 | DH361FRK ❶ |
| 30 | Non-fusible | NEMA 3R | 7.5 | 15 | 10 | 20 | DH361URK |
| 30 | Fusible | NEMA 4X | 7.5 | 10 | 15 | 20 | DH361FWK ❶ |
| 30 | Non-fusible | NEMA 4X | 7.5 | 10 | 20 | 30 | DH361UWK |
| 60 | Fusible | NEMA 1 | 20 | 30 | 25 | 50 | DH362FGK |
| 60 | Non-fusible | NEMA 1 | 20 | 30 | 25 | 50 | DH362UGK |
| 60 | Fusible | NEMA 3R | 20 | 30 | 25 | 50 | DH362FRK |
| 60 | Non-fusible | NEMA 3R | 20 | 30 | 25 | 50 | DH362URK |
| 60 | Fusible | NEMA 4X | 20 | 25 | 30 | 50 | DH362FWK |
| 60 | Non-fusible | NEMA 4X | 20 | 25 | 50 | 60 | DH362UWK |
| 100 | Fusible | NEMA 1 | 30 | 60 | 40 | 75 | DH363FGK |
| 100 | Non-fusible | NEMA 1 | 30 | 60 | 40 | 75 | DH363UGK |
| 100 | Fusible | NEMA 3R | 30 | 60 | 40 | 75 | DH363FRK |
| 100 | Non-fusible | NEMA 3R | 30 | 60 | 40 | 75 | DH363URK |
| 100 | Fusible | NEMA 4X | 30 | 40 | 60 | 75 | DH363FWK |
| 100 | Non-fusible | NEMA 4X | 40 | 50 | 75 | 100 | DH363UWK |
| 200 | Fusible | NEMA 1 | 50 | 125 | 50 | 150 | DH364FGK |
| 200 | Non-fusible | NEMA 1 | 50 | 125 | 50 | 150 | DH364UGK |
| 200 | Fusible | NEMA 3R | 50 | 125 | 50 | 150 | DH364FRK |
| 200 | Non-fusible | NEMA 3R | 50 | 125 | 50 | 150 | DH364URK |
| 200 | Fusible | NEMA 4X | 50 | 50 | 125 | 150 | DH364FWK |
| 200 | Non-fusible | NEMA 4X | 50 | 50 | 125 | 125 | DH364UWK |

❶ For 30 A switches requiring Class J fusing, switch must be ordered with the Class J clips from the factory by adding a suffix "J" on the end.

Safety switch kits

Neutral and ground lug kits ①

| Description | Catalog number |
|--------------------------------------|----------------|
| Neutral kit for 30–60 A switches | DH030NK |
| Neutral kit for 100 A switches | DH100NK |
| Neutral kit for 200 A switches | DG200NK |
| Ground lug kit for 30–100 A switches | DS100GK |
| Ground lug kit for 200 A switches | DS200GK |

- ① A factory-installed ground lug is supplied on all NEMA 4, 4X and 12 safety switches, as well as all 400 A and higher NEMA 1 and 3R safety switches. A factory-installed ground lug is also supplied on all heavy-duty NEMA 1 and 3R 30–200 A switches that do not have a factory installed neutral.

Class R fuse adapter kits

| Ampere rating | Type | Voltage | Catalog number |
|---------------|------------|---------|----------------|
| 30 | Heavy-duty | 600 | DS16FK |
| 60 | Heavy-duty | 600 | DS26FK |
| 100 | Heavy-duty | 600 | DS36FK |
| 200 | Heavy-duty | 600 | DS346FK |

Class J fuse adapter kit ①

| Ampere rating | Type | Voltage | Catalog number |
|---------------|------------|---------|----------------|
| 60 | Heavy-duty | 600 | DS26JK |

- ① 30 A switches must be ordered from the factory with Class J fuse provisions by adding suffix “J” at the end of the switch catalog number. 100 A and 200 A switches can be field modified by moving the load side fuse base.

Questions to ask

Step 1

1

Q How many phases?

A — Single-phase
— Three-phase

Step 2

2

Q What type of enclosure is required?

A — Ventilated
— Encapsulated

Step 3

3

Q What is the primary voltage? (input voltage)

A — Single-phase is 240 V x 480 V
— Three-phase is 480 V delta (three-phase, three-wire)

Step 4

4

Q What is the secondary voltage? (output voltage)

A — Single-phase
— 120/240

— Three-phase
— 208Y/120 (three-phase, four-wire) or 240 V delta

Step 5

5

Q What kVA transformer is required?

A — If single-phase encapsulated, kVAs are:
0.05, 0.075, 0.1, 0.15, 0.25, 0.5, 0.75, 1,
1.5, 2, 3, 5, 7.5, 10, 15, 25, 37.5
— If single-phase ventilated, kVAs are:
15, 25, 37.5, 50, 75, 100, 167
— If three-phase encapsulated, kVAs are:
3, 6, 9, 15, 30, 45, 75
— If three-phase ventilated, kVAs are:
15, 30, 45, 75, 112.5, 150, 225, 300

Step 6


6

Q If a ventilated transformer was selected

A — Field kits: lug kits or weathershields
— Select from selection tables


Transformers

Catalog numbering system—DOE 2016 ventilated transformers

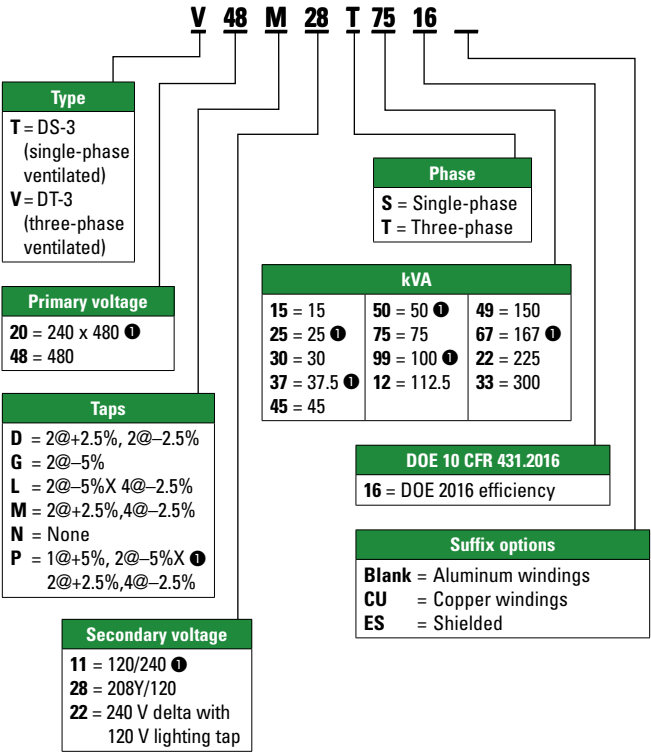

① Typically used with single-phase transformers.

Catalog numbering system—encapsulated transformers

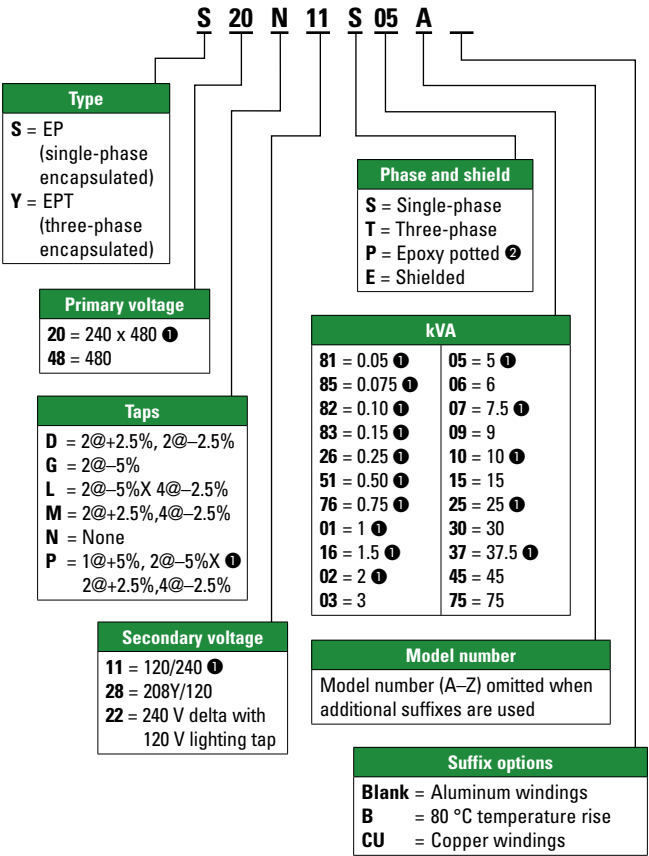

❶ Typically used with single-phase transformers.

❷ Single-phase 0.25–2 kVA encapsulated transformers only.

General-purpose transformers

Three-phase ventilated, 480 delta—208 Y/120, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|-------|--------------|----------------|---------------|-----------------|----------------|
| 15 | 939 | 280B | WS57 | LKS1 | V48M28T1516 ① |
| 30 | 940 | 280B | WS58 | LKS1 | V48M28T3016 ① |
| 45 | 940 | 280B | WS58 | LKS1 | V48M28T4516 ① |
| 75 | 942 | 280B | WS59 | LKS2 | V48M28T7516 ② |
| 112.5 | 943 | 280B | WS60 | LKS2 | V48M28T1216 ② |
| 150 | 943 | 280B | WS60 | LKS3 | V48M28T4916 ② |
| 225 | 944 | 280B | WS61 | LKS3 | V48M28T2216 |
| 300 | 945 | 280B | WS62 | LKS3 | V48M28T3316 |

① Suitable for use with wall-mounted bracket WMB05.

② Suitable for use with wall-mounted bracket WMB04.

Three-phase ventilated, 480 delta—240/120 lighting tap, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|-------|--------------|----------------|---------------|-----------------|----------------|
| 15 | 939 | 282B | WS57 | LKS1 | V48M22T1516 ① |
| 30 | 940 | 282B | WS58 | LKS1 | V48M22T3016 ① |
| 45 | 940 | 282B | WS58 | LKS1 | V48M22T4516 ① |
| 75 | 942 | 282B | WS59 | LKS2 | V48M22T7516 ② |
| 112.5 | 943 | 282B | WS60 | LKS2 | V48M22T1216 ② |
| 150 | 943 | 282B | WS60 | LKS3 | V48M22T4916 ② |
| 225 | 944 | 282B | WS61 | LKS3 | V48M22T2216 |
| 300 | 945 | 282B | WS62 | LKS3 | V48M22T3316 |

① Suitable for use with wall-mounted bracket WMB05.

② Suitable for use with wall-mounted bracket WMB04.

Three-phase encapsulated, 480 delta—208 Y/120, 115 °C rise

| kVA | Frame number | Wiring diagram | Catalog number |
|-----|--------------|----------------|----------------|
| 3 | 201 | 70A | Y48G28T03N |
| 6 | 200 | 70A | Y48G28T06N |
| 9 | 103 | 70A | Y48G28T09N |
| 15 | 95 | 72B | Y48D28T15N |
| 30 | 243 | 84A | Y48M28T30N |
| 45 | 244 | 84A | Y48M28T45N |
| 75 | 245 | 84A | Y48M28T75N |

Note: For frame drawings and wiring diagrams, refer to www.eaton.com/transformers.

General-purpose transformers

Single-phase ventilated, 240 x 480–120/240, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|------|--------------|----------------|---------------|-----------------|----------------------|
| 15 | 842 | 3XA | WS45 | LKS1 | T20P11S1516 ① |
| 25 | 842 | 3XA | WS45 | LKS1 | T20P11S2516 ① |
| 37.5 | 843 | 3XA | WS43 | LKS1 | T20P11S3716 |
| 50 | 843 | 3XA | WS43 | LKS2 | T20P11S5016 |
| 75 | 844 | 3XA | WS44 | LKS2 | T20P11S7516 |
| 100 | 844 | 3XA | WS44 | LKS3 | T20P11S9916 |
| 167 | 814 | 288A | WS13 | LKS3 | T48P11S6716 ② |

① Suitable for use with wall-mounted bracket WMB01.

② 480 V primary only.

Single-phase encapsulated 240 x 480–120/240, 115 °C rise

| kVA | Frame number | Wiring diagram | Catalog number |
|-------|--------------|----------------|-------------------|
| 0.05 | 52 | 3A | S20N11S81N |
| 0.075 | 53 | 3A | S20N11S85N |
| 0.1 | 54 | 3A | S20N11S82N |
| 0.15 | 55 | 3A | S20N11S83N |
| 0.25 | 57P | 3A | S20N11P26P |
| 0.5 | 57P | 3A | S20N11P51P |
| 0.75 | 58P | 3A | S20N11P76P |
| 1 | 67P | 3A | S20N11P01P |
| 1.5 | 67P | 3A | S20N11P16P |
| 2 | 68P | 3A | S20N11P02P |
| 3 | 176 | 3A | S20N11S03N |
| 5 | 177 | 3A | S20N11S05N |
| 7.5 | 178 | 3A | S20N11S07N |
| 10 | 179 | 3A | S20N11S10N |
| 15 | 180 | 3A | S20N11S15N |
| 25 | 182 | 23A | S20L11S25N |
| 37.5 | 300A | 248A | S20L11S37 |

Note: For frame drawings and wiring diagrams, refer to www.eaton.com/transformers.

General-purpose transformers sizing tables

Three-phase transformer full load current

| kVA | Rated line-line voltage | | | | | | |
|-------|-------------------------|--------|--------|-------|-------|-------|-------|
| | 208 | 240 | 480 | 600 | 2400 | 4160 | 4800 |
| 3 | 8.3 | 7.2 | 3.6 | 2.9 | 0.7 | 0.4 | 0.4 |
| 6 | 16.7 | 14.4 | 7.2 | 5.8 | 1.4 | 0.8 | 0.7 |
| 9 | 25.0 | 21.7 | 10.8 | 8.7 | 2.2 | 1.2 | 1.1 |
| 15 | 41.6 | 36.1 | 18.0 | 14.4 | 3.6 | 2.1 | 1.8 |
| 30 | 83.3 | 72.2 | 36.1 | 28.9 | 7.2 | 4.2 | 3.6 |
| 45 | 124.9 | 108.3 | 54.1 | 43.3 | 10.8 | 6.2 | 5.4 |
| 75 | 208.2 | 180.4 | 90.2 | 72.2 | 18.0 | 10.4 | 9.0 |
| 112.5 | 312.3 | 270.6 | 135.3 | 108.3 | 27.1 | 15.6 | 13.5 |
| 150 | 416.4 | 360.9 | 180.4 | 144.3 | 36.1 | 20.8 | 18.0 |
| 225 | 624.6 | 541.3 | 270.6 | 216.5 | 54.1 | 31.2 | 27.1 |
| 300 | 832.7 | 721.7 | 360.9 | 288.7 | 72.2 | 41.6 | 36.1 |
| 500 | 1387.9 | 1202.8 | 601.4 | 481.1 | 120.3 | 69.4 | 60.1 |
| 750 | 2081.9 | 1804.3 | 902.1 | 721.7 | 180.4 | 104.1 | 90.2 |
| 1000 | 2775.8 | 2405.7 | 1202.8 | 962.3 | 240.6 | 138.8 | 120.3 |

Note: Line current = (kVA x 1000) / (line voltage x 1.732).

Single-phase transformer full load current

| kVA | Rated line-line voltage | | | | | | | | |
|------|-------------------------|--------|--------|--------|-------|-------|-------|------|------|
| | 120 | 208 | 240 | 277 | 480 | 600 | 2400 | 4160 | 4800 |
| 0.5 | 4.2 | 2.4 | 2.1 | 1.8 | 1.0 | 0.8 | 0.2 | 0.1 | 0.1 |
| 1 | 8.3 | 4.8 | 4.2 | 3.6 | 2.1 | 1.7 | 0.4 | 0.2 | 0.2 |
| 1.5 | 12.5 | 7.2 | 6.3 | 5.4 | 3.1 | 2.5 | 0.6 | 0.4 | 0.3 |
| 2 | 16.7 | 9.6 | 8.3 | 7.2 | 4.2 | 3.3 | 0.8 | 0.5 | 0.4 |
| 3 | 25.0 | 14.4 | 12.5 | 10.8 | 6.3 | 5.0 | 1.3 | 0.7 | 0.6 |
| 5 | 41.7 | 24.0 | 20.8 | 18.1 | 10.4 | 8.3 | 2.1 | 1.2 | 1.0 |
| 7.5 | 62.5 | 36.1 | 31.3 | 27.1 | 15.6 | 12.5 | 3.1 | 1.8 | 1.6 |
| 10 | 83.3 | 48.1 | 41.7 | 36.1 | 20.8 | 16.7 | 4.2 | 2.4 | 2.1 |
| 15 | 125.0 | 72.1 | 62.5 | 54.2 | 31.3 | 25.0 | 6.3 | 3.6 | 3.1 |
| 25 | 208.3 | 120.2 | 104.2 | 90.3 | 52.1 | 41.7 | 10.4 | 6.0 | 5.2 |
| 37.5 | 312.5 | 180.3 | 156.3 | 135.4 | 78.1 | 62.5 | 15.6 | 9.0 | 7.8 |
| 50 | 416.7 | 240.4 | 208.3 | 180.5 | 104.2 | 83.3 | 20.8 | 12.0 | 10.4 |
| 75 | 625.0 | 360.6 | 312.5 | 270.8 | 156.3 | 125.0 | 31.3 | 18.0 | 15.6 |
| 100 | 833.3 | 480.8 | 416.7 | 361.0 | 208.3 | 166.7 | 41.7 | 24.0 | 20.8 |
| 167 | 1391.7 | 802.9 | 695.8 | 602.9 | 347.9 | 278.3 | 69.6 | 40.1 | 34.8 |
| 250 | 2083.3 | 1201.9 | 1041.7 | 902.5 | 520.8 | 416.7 | 104.2 | 60.1 | 52.1 |
| 333 | 2775.0 | 1601.0 | 1387.5 | 1202.2 | 693.8 | 555.0 | 138.8 | 80.0 | 69.4 |

Note: Line current = (kVA x 1000) / line voltage.

Questions to ask

Step 1

1

Q What type of enclosure do you need?

- A**
- NEMA 1 (general-duty)
 - NEMA 3R (rain-tight)
 - NEMA 12 (dust-tight)
 - NEMA 4X (wash-down)

Step 2

2

Q What type of starter do you need?

- A**
- NEMA non-combination
 - NEMA combination, non-fusible or fusible
 - NEMA combination, breaker
 - Lighting contactor

Step 3

3

Q What is the horsepower and voltage of the motor?
(Note: this will determine the NEMA starter size)

- A**
- Horsepower: 1, 5, 10, 25 hp etc.
 - Motor voltage: 200, 230, 460, 575 V

Step 4

4

Q What is the control voltage for the coil?

- A**
- 120 Vac
 - 240 Vac
 - 480 Vac

Step 5

5

Q What size overload relay is needed?

- A**
- 1–5 FLA
 - 4–20 FLA
 - 9–45 FLA

Step 6


6

Q What additional accessories do you need?

- A**
- Cover control kits, such as HAND/OFF/AUTO selector switch or STOP/START pushbuttons
 - CPT kits
 - Fuse kits

Enclosed control

Catalog numbering system—non-combination and combination NEMA enclosed starters

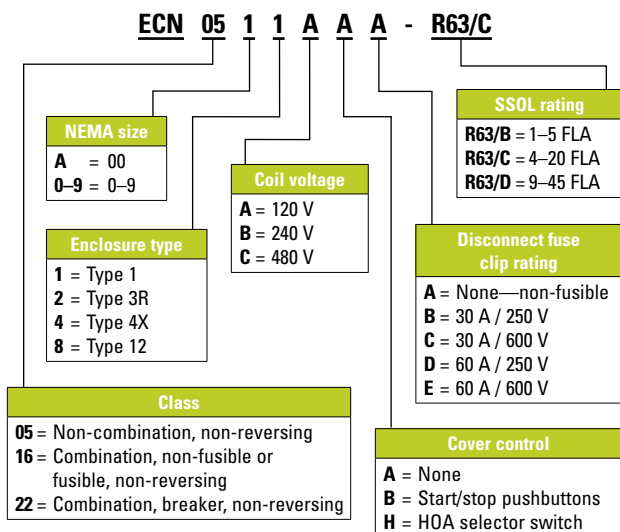

Starters

NEMA non-combination, non-reversing starters, Type 1

| NEMA size | Motor voltage | Maximum hp rating | Magnet coil voltage | SSOL range | Catalog number |
|-----------|---------------|-------------------|---------------------|------------|------------------|
| 00 | 200, 230 | 1-1/2 | 120 | 1-5 | ECN05A1AAA-R63/B |
| | 460 | 2 | 120 | 1-5 | ECN05A1AAA-R63/B |
| 0 | 200, 230 | 3 | 120 | 1-5 | ECN0501AAA-R63/B |
| | 460 | 5 | 120 | 1-5 | ECN0501AAA-R63/B |
| | 200, 230 | 3 | 120 | 4-20 | ECN0501AAA-R63/C |
| | 460 | 5 | 120 | 4-20 | ECN0501AAA-R63/C |
| 1 | 200, 230 | 7-1/2 | 120 | 4-20 | ECN0511AAA-R63/C |
| | 460 | 10 | 120 | 4-20 | ECN0511AAA-R63/C |
| 2 | 200, 230 | 10 | 120 | 9-45 | ECN0521AAA-R63/D |
| | 460 | 25 | 120 | 9-45 | ECN0521AAA-R63/D |

NEMA combination, non-reversing starters, non-fusible disconnect Type 1

| NEMA size | Motor voltage | Maximum hp rating | Magnet coil voltage | SSOL range | Catalog number |
|-----------|---------------|-------------------|---------------------|------------|------------------|
| 00 | 200, 230 | 1-1/2 | 120 | 1-5 | ECN16A1AAA-R63/B |
| | 460 | 2 | 120 | 1-5 | ECN16A1AAA-R63/B |
| 0 | 200, 230 | 3 | 120 | 1-5 | ECN1601AAA-R63/B |
| | 460 | 5 | 120 | 1-5 | ECN1601AAA-R63/B |
| | 200, 230 | 3 | 120 | 4-20 | ECN1601AAA-R63/C |
| | 460 | 5 | 120 | 4-20 | ECN1601AAA-R63/C |
| 1 | 200, 230 | 7-1/2 | 120 | 4-20 | ECN1611AAA-R63/C |
| | 460 | 10 | 120 | 4-20 | ECN1611AAA-R63/C |
| 2 | 200, 230 | 10 | 120 | 9-45 | ECN1621AAA-R63/D |
| | 460 | 25 | 120 | 9-45 | ECN1621AAA-R63/D |

Starters

NEMA enclosures with CPT modifications

To order an enclosure with CPT:

1. Change ECN05 to ECN07 for non-combination units, and ECN16 to ECN18 for combination units.
2. Change the "A" in the 7th catalog string to the correct letter based on the below table:

| Catalog string letter | Primary | Secondary |
|------------------------------|---------------------------------|------------------|
| E | 208/60 | 120/60 |
| B | 240/480–220/440 wired for 240 V | 120/60–110/50 |
| C | 240/480–220/440 wired for 480 V | 120/60–110/50 |


NEMA accessories—CPT and fuse kits

| Description | Catalog number |
|---|-----------------------|
| 100 VA CPT kit (208/277 V primary, 120 V secondary) | C341CE |
| 100 VA CPT kit (240/480 V primary, 120 V secondary) | C341CC |
| Fuse clip kit for combination starter—30 A / 250 V | C351KC21 |
| Fuse clip kit for combination starter—30 A / 600 V and 60 A / 250 V | C351KD22-61 |

NEMA accessories—cover control kits

| Description | Catalog number | | |
|---|--|---|---|
| | Non-combination Type 1, size 00–2 | Non-combination Type 1, size 3–5 | Combination Type 1 and all Type 3R, 12, 4X |
| STOP/START pushbuttons | C600M1 | C400GK1 | C400T1 |
| STOP/START pushbuttons with red RUN light (85–264 Vac) | C600M101A | C400GK12 | — |
| HAND/OFF/AUTO selector switch | C600M12 | C400GK3 | C400T12 |
| HAND/OFF/AUTO selector switch with red RUN light (85–264 Vac) | C600M121A | C400GK32 | — |

Catalog numbering system—enclosed lighting contactors

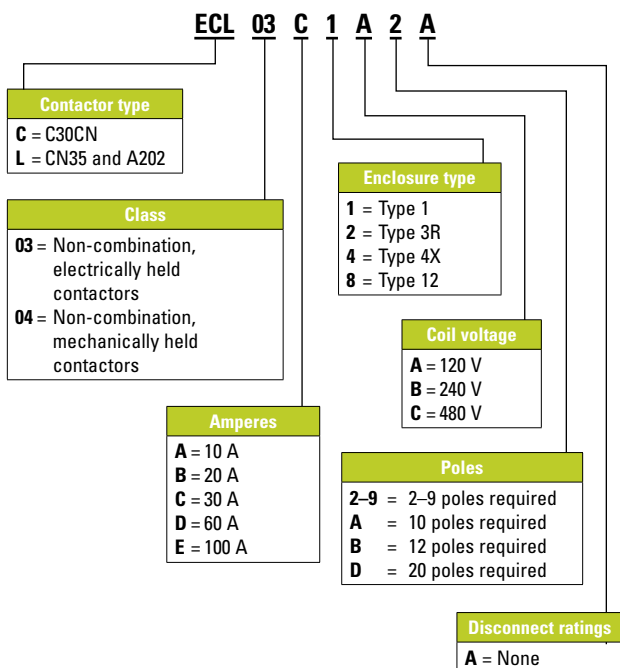

Lighting contactors

Lighting non-combination contactors, Type 1

| Contactor type | Number of poles | Ampere rating | Coil voltage | Catalog number |
|--------------------------|-----------------|---------------|--------------|-------------------|
| C30CN, electrically held | 2 | 30 | 120 | ECC03C1A2A |
| C30CN, electrically held | 4 | 30 | 120 | ECC03C1A4A |
| C30CN, electrically held | 6 | 30 | 120 | ECC03C1A6A |
| CN35, electrically held | 2 | 20 | 120 | ECL03B1A2A |
| CN35, electrically held | 4 | 20 | 120 | ECL03B1A4A |
| CN35, electrically held | 6 | 20 | 120 | ECL03B1A6A |

Questions to ask

Step

1

Q Do you need an assembled pushbutton station or loose components in clam-shell packaging?

- A**
- Assembled pushbutton station
 - Loose components in clam-shell package

Step

2

For pushbutton stations

Q What size of pushbutton station do you need?

- A**
- 22 mm
 - 30 mm

Q How many elements (operators) do you want?

- A**
- 1
 - 2
 - 3

Step

3

For loose components

Q What type of operator do you need?

- A**
- Emergency stop operator
 - Momentary pushbutton
 - Indicating light
 - Illuminated pushbutton
 - Selector switches

Pushbutton stations and pushbuttons

Pushbutton stations

30 mm pushbutton stations

| Description | Catalog number |
|--|-------------------|
| Single-element | |
| Emergency Off—break glass pushbutton station, NC | 10250TGR |
| Man-Off-Auto selector switch pushbutton station, 2NO | 10250T3524 |
| Stop mushroom head pushbutton station, 1NC | 10250T3519 |
| Two-element | |
| Start-Stop pushbutton station, 1NO-2NC | 10250T3525 |
| Start-Stop rectangular pushbutton station, 1NO-1NC | 10250H5200 |
| Three-element | |
| Open-Close-Stop pushbutton station, 2NO-3NC | 10250T3614 |
| Up-Down-Stop rectangular pushbutton station, 2NO-1NC | 10250H5301 |

22 mm pushbutton stations

| Description | Catalog number |
|--|-------------------|
| Single-element | |
| 40 mm mushroom head push-pull emergency stop operator, NC | M22-C1-M1H |
| 40 mm illuminated mushroom head push-pull emergency stop operator, 85–264 Vac, NO-NC | M22-C1-M2H |
| Two-element | |
| Flush pushbutton, Start-Stop, NO-NC | M22-C2-M2V |
| Flush pushbutton, Forward-Reverse, 2NO | M22-C2-M3V |
| Three-element | |
| Flush pushbutton, Open-Stop-Close, 2NO-1NC | M22-C3-M4V |
| Flush pushbutton, Forward-Stop-Reverse, 2NO-1NC | M22-C3-M5V |
| Flush pushbutton, Up-Stop-Down, 2NO-NC | M22-C3-M6V |

Pushbutton components

Individually packaged 30 mm pushbuttons and operators NEMA 4, 4X, 12 13

| Description | Catalog number |
|--|--------------------|
| Emergency stop operator | |
| Red non-illuminated push-pull, 1NO-1NC, includes 2 legend plates: EMERG. STOP and STOP | 10250T5B62-1-POP |
| Jumbo mushroom pushbutton, 1NO-1NC, button engraved EMERG. STOP (button is engraved—no legend plate provided) | 10250T33-POP |
| Red mushroom pushbutton engraved EMERG. STOP, 1NO-1NC, includes 2 legend plates: EMERG. STOP and STOP | 10250T32R-POP |
| Momentary pushbutton | |
| Black flush pushbutton, 1NO-1NC, includes 1 legend plate: START and JOG | 10250T30B-POP |
| Red extended pushbutton, 1NO-1NC, includes 1 legend plate: STOP | 10250T31R-POP |
| Indicating light | |
| Red indicating light transformer 120 Vac with two extra lenses (green and amber), 1NO-1NC, includes 2 legend plates: RUN and JOG | 10250T34R-POP |
| Illuminated pushbutton | |
| Red illuminated pushbutton (120 Vac/Vdc), with 2 extra lenses (green and amber), 1NO-1NC, includes 1 legend plate: Power On | 10250T411C21-1-POP |
| Selector switches | |
| Two-position selector switch, 1NO-1NC, includes 3 legend plates: Off/On, Hand/Auto and Run/Jog | 10250T20KB-POP |
| Three-position selector switch, 2NO-2NC, includes 1 legend plate: Hand/Off/Auto | 10250T22KB-POP |
| Three-position selector switch, 1NO-1NC, includes 1 legend plate: Hand/Off/Auto | 10250T21KB-POP |

Questions to ask

Step

1

Q What is the motor nameplate information?

- A**
- System (AC or DC) and voltage?
 - If AC, is the motor single-phase or three-phase?
 - What is the motor horsepower?

Step

2

Q What type of enclosure is needed?

- A**
- No enclosure (will be mounted in separate enclosure)
 - NEMA 1 enclosure

Step

3

Q Is overload protection required?

- A**
- No
 - Yes. If yes, what is the motor full load amperes (FLA)?

Step

4

Q What type of operator does the customer want?

- A**
- Button
 - Toggle

Manual starters

Manual starters

Manual motor switches without overload

| Type | Pole config. | Maximum motor (hp) | | | | Catalog number | |
|-------|--------------|--------------------|-------|-------|-------|----------------|----------|
| | | 120 V | 240 V | 480 V | 230 V | Open | Enclosed |
| B230A | Two-pole | 2 | 5 | — | — | B230AN | B230AG |
| B230B | Two-pole | 2 | 5 | 10 | 15 | B230BND | B230BGD |
| | Three-pole | 3 | 7.5 | 15 | 20 | B330AND | B330AGD |

Single-phase manual starters with overload protection— Type MS series starters ①

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------|-----------|--------------------|---------|---------|----------------|------------|
| | | AC voltage | | | Open | Enclosed ② |
| | | 120 Vac | 240 Vac | 277 Vac | | |
| Single-pole | 0 | 1 | 1 | 1 | MST01 | MST01SN1P |
| Two-pole | 0 | 1 | 1 | 1 | MST02 | MST02SN1P |

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------|-----------|--------------------|---------|--------|----------------|------------|
| | | DC voltage | | | Open | Enclosed ② |
| | | 120 Vdc | 240 Vdc | 32 Vdc | | |
| Single-pole | 0 | ¼ | ¼ | ¼ | MST01 | MST01SN1P |
| Two-pole | 0 | ¼ | ¼ | ¼ | MST02 | MST02SN1P |

① Use MSH heaters for MS series starters.

② With pilot light.

Single- and three-phase manual starters with overload protection— Type B100 ①

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------------------|-----------|--------------------|-------------|-------------|----------------|------------|
| | | AC voltage | | | Open | Enclosed ② |
| | | 120 Vac | 208–240 Vac | 480–600 Vac | | |
| Two-pole (single-phase) | 0 | 1 | 2 | — | B100M0B | B100S0B |
| | 1 | 2 | 3 | — | B100M1B | B100S1B |
| Three-pole (three-phase) | 0 | 2 | 3 | 5 | B100M0C | B100S0C |
| | 1 | 3 | 7½ | 10 | B100M1C | B100S1C |

| Pole config. | NEMA size | Maximum motor (hp) | | Catalog number | |
|--------------------------|-----------|--------------------|---------|----------------|------------|
| | | DC voltage | | Open | Enclosed ② |
| | | 115 Vdc | 230 Vdc | | |
| Two-pole (single-phase) | 0 | 1 | 1½ | B100M0B | B100S0B |
| | 1 | 1½ | 2 | B100M1B | B100S1B |
| Three-pole (three-phase) | 0 | — | — | B100M0C | B100S0C |
| | 1 | — | — | B100M1C | B100S1C |

① Use FH heaters for Type B100 starters.

② NEMA 1.

* At Eaton, we believe that power is a fundamental part of just about everything people do. Technology, transportation, energy and infrastructure—these are things the world relies on every day. That's why Eaton is dedicated to helping our customers find new ways to manage electrical, hydraulic and mechanical power more efficiently, safely and sustainably. To improve people's lives, the communities where we live and work, and the planet our future generations depend upon. Because that's what really matters. And we're here to make sure it works.

See more at [Eaton.com/whatmatters](https://www.eaton.com/whatmatters)

For more information, visit
[Eaton.com/powrstock](https://www.eaton.com/powrstock)

Eaton is a registered trademark.

All other trademarks are property of their respective owners.

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
[Eaton.com](https://www.eaton.com)

© 2018 Eaton
All Rights Reserved
Printed in USA
Publication No. CA08307001E / Z20429
February 2018

EATON
Powering Business Worldwide

Pow-R-Stock^{Plus} quick selector reference guide

Frequently used distribution
and control products available
from distributor stock



EATON

Powering Business Worldwide

Table of contents



Pow-R-Stock panelboards

| | |
|--|----|
| Questions to ask | 5 |
| Catalog numbering | 6 |
| Interiors, EZ Boxes and EZ Trims..... | 8 |
| Branch circuit breakers | 10 |
| Universal main circuit breaker kits— top or bottom mounting | 11 |
| Lug kits and accessories | 13 |



Safety switches/ disconnects

| | |
|------------------------------------|----|
| Questions to ask | 14 |
| Catalog numbering | 15 |
| General-duty safety switches | 16 |
| Heavy-duty safety switches | 17 |
| Safety switch kits | 18 |



Transformers

| | |
|-----------------------------------|----|
| Questions to ask | 19 |
| Catalog numbering | 20 |
| General-purpose transformers..... | 22 |
| Sizing tables | 24 |



Enclosed control

| | |
|--|----|
| Questions to ask | 25 |
| Catalog numbering | 26 |
| NEMA non-combination, non-reversing starters, Type 1 | 26 |
| NEMA combination, non-reversing starters, non-fusible disconnect, Type 1 | 26 |
| NEMA accessories..... | 27 |
| Lighting contactors..... | 28 |



Pushbutton stations and pushbuttons

| | |
|---|----|
| Questions to ask | 29 |
| 30 mm pushbutton stations | 30 |
| 22 mm pushbutton stations | 30 |
| Individually packaged 30 mm pushbuttons and operators..... | 31 |



Manual starters

- Questions to ask 32
- Manual motor switches without overload 33
- Single-phase manual starter with overload protection 33
- Single- and three-phase manual starters with
overload protection 33

Questions to ask

Step 1

1

Select an interior

Q What is your voltage?

A — 120/240 V single-phase, three-wire
— 208Y/120 V three-phase, four-wire
— 480Y/277 V three-phase, four-wire

Q What is your busbar rating?

A — 100 A (aluminum or copper)
— 225 A (aluminum or copper)
— 400 A (aluminum or copper)
— 600 A (aluminum or copper)

Q What is the number of branch circuits/poles?

A — 18
— 30
— 42

Step 2

2

Enclosure type

Q What enclosure is required?

A — NEMA® 1 indoor
— NEMA 3R outdoor

Step 3

3

Trim type

Q For NEMA 1 indoor panels, will the panel be mounted recessed in the wall or mounted directly to the wall?

A — Flush
— Surface

Step 4

4

Q What is the cable entry locations for the incoming feeder?

A — Top
— Bottom

Step 5

5


Main device

Q Main lugs only (MLO) or main circuit breaker?


A — MLO
— MCB (choose amperage and top or bottom)

Pow-R-Stock panelboards (unassembled)

Catalog numbering system— Pow-R-Stock panelboard interiors

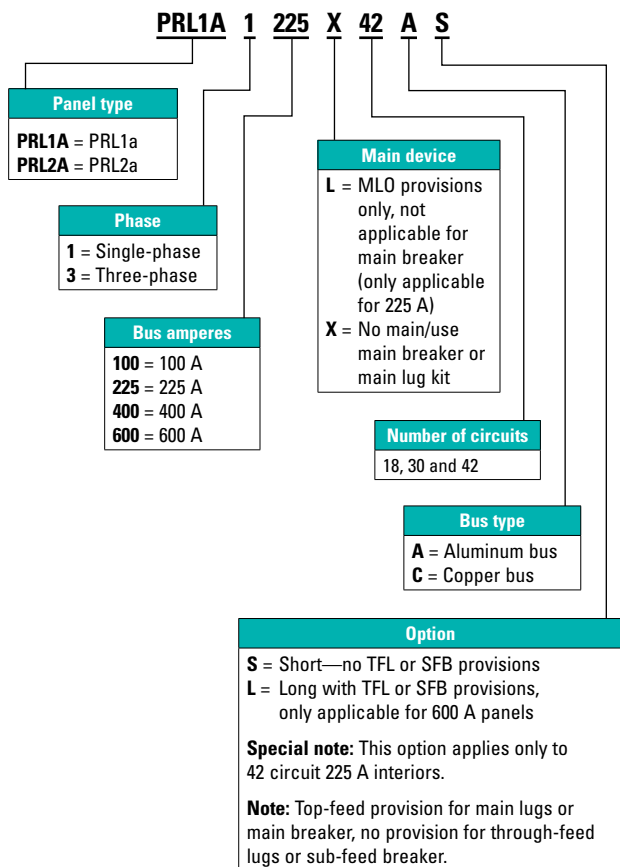

Catalog numbering system— EZ Panel factory-assembled stock panelboards

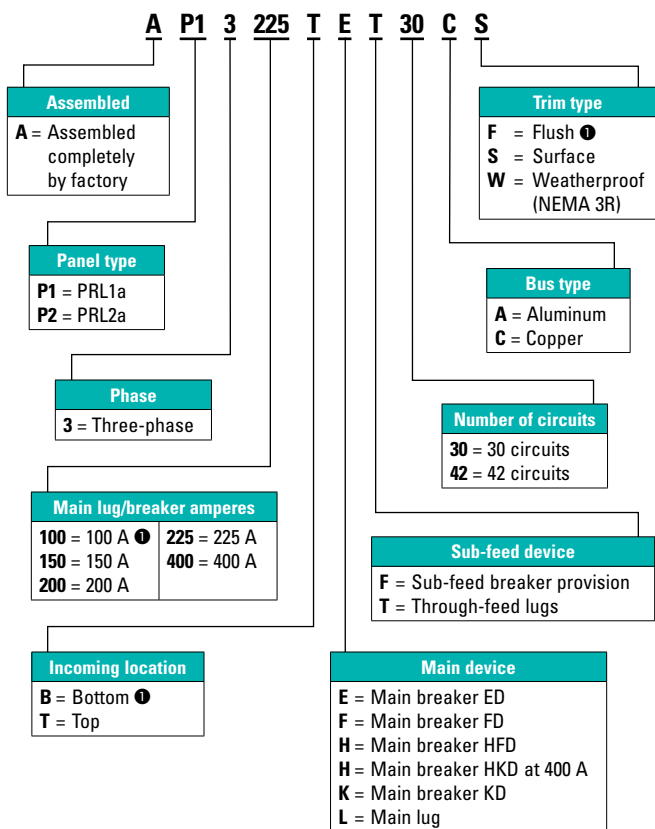

❶ These items are not part of the initial launch. Please consult VISTA or your Eaton sales engineer for product availability.

Notes: Not all combinations may be valid. Please verify availability of catalog number created. Refer to PA014007EN for more information on the EZ Panel.

Pow-R-Stock panelboards—EZ™ Boxes and EZ Trims

| Ampere rating | Max. number of poles | Capability | | | | Sub-feed breaker (225 A max.) | Catalog numbers |
|---|----------------------|------------|--------------|-------------------|--|-------------------------------|-----------------|
| | | Main lugs | Main breaker | Through-feed lugs | Interiors (less main device) | | |
| | | | | | Aluminum bus | | |
| Single-phase, three-wire 120/240 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | PRL1A1100X18A | |
| 100 | 30 | ■ | ■ | ■ | 100 | PRL1A1100X30A | |
| 100 | 42 | ■ | ■ | ■ | N/A | PRL1A1100X42A | |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A1225X30A | |
| 225 | 42 | ■ | ■ | N/A | N/A | PRL1A1225X42AS ❶ | |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A1225X42A | |
| 400 | 42 | ■ | ■ | N/A | N/A | PRL1A1400X42AS ❶ | |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A1400X42A | |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |
| Three-phase, four-wire 208Y/120 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | PRL1A3100X18A | |
| 100 | 30 | ■ | ■ | ■ | 100 | PRL1A3100X30A | |
| 100 | 42 | ■ | ■ | ■ | N/A | PRL1A3100X42A | |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A3225X30A | |
| 225 | 42 | ■ | N/A | N/A | N/A | PRL1A3225L42AS ❶ | |
| 225 | 42 | ■ | ■ | N/A | N/A | PRL1A3225X42AS ❶ | |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A3225X42A | |
| 400 | 42 | ■ | ■ | N/A | N/A | PRL1A3400X42AS ❶ | |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL1A3400X42A | |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |
| Three-phase, four-wire 480Y/277 Vac | | | | | | | |
| 100 | 18 | ■ | ■ | ■ | N/A | PRL2A3100X18A | |
| 100 | 30 | ■ | ■ | ■ | 100 | PRL2A3100X30A | |
| 100 | 42 | ■ | ■ | ■ | N/A | PRL2A3100X42A | |
| 225 | 30 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL2A3225X30A | |
| 225 | 42 | ■ | N/A | N/A | N/A | PRL2A3225L42AS ❶ | |
| 225 | 42 | ■ | ■ | N/A | N/A | PRL2A3225X42AS ❶ | |
| 225 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL2A3225X42A | |
| 400 | 42 | ■ | ■ | N/A | N/A | PRL2A3400X42AS ❶ | |
| 400 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225 | PRL2A3400X42A | |
| 600 | 42 | ■ | ■ | ■ | N/A | | |
| 600 | 42 | ■ | ■ | ■ | 100, 125, 150, 175, 200, 225, 250, 300, 350, 400 | | |

❶ S = Short—no TFL or SFB provisions.

| Copper bus | Boxes | Trims (NEMA 1) | | NEMA 3R enclosures |
|------------------|----------|----------------|----------|--------------------|
| | NEMA 1 | Surface | Flush | |
| PRL1A1100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL1A1100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A1225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A1400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A1400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A1600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A1600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |
| PRL1A3100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL1A3100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225L42CS ① | EZB2042R | EZT2042S | EZT2042F | GWPBQ2042PR |
| PRL1A3225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL1A3225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A3400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL1A3400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A3600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL1A3600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |
| PRL2A3100X18C | EZB2036R | EZT2036S | EZT2036F | GWPBQ2036PR |
| PRL2A3100X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3100X42C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225X30C | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225L42CS ① | EZB2042R | EZT2042S | EZT2042F | GWPBQ2042PR |
| PRL2A3225X42CS ① | EZB2048R | EZT2048S | EZT2048F | GWPBQ2048PR |
| PRL2A3225X42C | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL2A3400X42CS ① | EZB2060R | EZT2060S | EZT2060F | GWPBQ2060PR |
| PRL2A3400X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL2A3600X42C | EZB2072R | EZT2072S | EZT2072F | GWPBQ2072PR |
| PRL2A3600X42CL | EZB2090R | EZT2090S | EZT2090F | GWPBQ2090PR |

Note: The colors shown in the tables correspond to the color coding on the trim, interior and box product packaging labels. Be sure that all three parts match when delivering to your customer.

Note: Distributors can purchase boxes in quantities via the Distributor toolbox.

Branch circuit breakers

Summary of branch breakers available

| Breaker | No. of poles | Ampere rating | Voltage | kAIC rating | Example | Panel type |
|---------|--------------|---------------|----------|-------------|--------------------|------------|
| BAB ①② | 1 | 15–70 | 120 | 10 | BAB1020 | PRL1a |
| | 2 | 15–100 | 120/240 | 10 | BAB2020 | PRL1a |
| | 2 | 15–100 | 240 | 10 | BAB2040H | PRL1a |
| | 3 | 15–100 | 240 | 10 | BAB3030H | PRL1a |
| QBAF | 1 | 15–20 | 120 | 10 | QBAF1020 | PRL1a |
| QBHAF | 1 | 15–20 | 120 | 22 | QBHAF1020 | PRL1a |
| QBCAF | 1 | 15–20 | 120 | 10 | QBCAF1020 | PRL1a |
| QBHCAF | 1 | 15–20 | 120 | 22 | QBHCAF1020 | PRL1a |
| QBGFT | 1 | 15–40 | 120 | 10 | QBGFT1020 | PRL1a |
| | 2 | 15–50 | 120/240 | 10 | QBGFT2040 | PRL1a |
| QBHGFT | 1 | 15–30 | 120 | 22 | QBHGFT1020 | PRL1a |
| | 2 | 15–30 | 120/240 | 22 | QBHGFT2020 | PRL1a |
| QBGFEP | 1 | 15–40 | 120 | 10 | QBGFEP1020 | PRL1a |
| | 2 | 15–50 | 120/240 | 10 | QBGFEP2020 | PRL1a |
| QBHGFEF | 1 | 15–30 | 120 | 22 | QBHGFEF1020 | PRL1a |
| | 2 | 15–30 | 120/240 | 22 | QBHGFEF2020 | PRL1a |
| QBHW ① | 1 | 15–70 | 120 | 22 | QBHW1020 | PRL1a |
| | 2 | 15–100 | 120/240 | 22 | QBHW2020 | PRL1a |
| | 2 | 15–100 | 240 | 22 | QBHW2040H | PRL1a |
| | 3 | 15–100 | 240 | 22 | QBHW3030H | PRL1a |
| GHQ ① | 1 | 15–20 | 277 | 14 | GHQ1020 | PRL2a |
| GHB ①② | 1 | 15–100 | 277 | 14 | GHB1020 | PRL2a |
| | 2 | 15–100 | 480Y/277 | 14 | GHB2040 | PRL2a |
| | 3 | 15–100 | 480Y/277 | 14 | GHB3060 | PRL2a |

① BAB, QBHW, GHQ and GHB breakers installed in PRL1a and PRL2a are available with shunt trip, i.e., BAB1020S.

② BAB-H and GHB 50–100 A available as chassis-mounted main device.

Universal main circuit breaker kits— top or bottom mounting

Kits—main circuit breaker (includes circuit breaker and terminals)

| Max. volt. | Ampere rating | Service | Breaker frame | Mounting location | Wire range Al/Cu (in kcmil) | Catalog number |
|------------|---------------|------------------------|---------------|-------------------|-----------------------------|-----------------|
| 240 Vac | 100 | Single- or three-phase | ED | Universal | (1) #14–1/0 | BKED100 |
| | 125 | Single- or three-phase | ED | Universal | (1) #4–4/0 | BKED125 |
| | 150 | Single- or three-phase | ED | Universal | (1) #4–4/0 | BKED150 |
| | 175 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED175 |
| | 200 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED200 |
| | 225 | Single- or three-phase | ED | Universal | (1) #4–4/0 ① | BKED225 |
| 480 Vac | 100 | Single- or three-phase | FD | Universal | (1) #14–1/0 | BKFD100 |
| | 110 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD110 |
| | 125 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD125 |
| | 150 | Single- or three-phase | FD | Universal | (1) #4–4/0 | BKFD150 |
| | 175 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD175 |
| | 200 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD200 |
| | 225 | Single- or three-phase | FD | Universal | (1) #4–4/0 ① | BKFD225 |
| 480 Vac | 100 | Single- or three-phase | HFD | Universal | (1) #14–1/0 | BKHFD100 |
| | 110 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD110 |
| | 125 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD125 |
| | 150 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD150 |
| | 175 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD175 |
| | 200 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD200 |
| | 225 | Single- or three-phase | HFD | Universal | (2) #4–4/0 | BKHFD225 |
| 480 Vac | 250 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD250 |
| | 300 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD300 |
| | 350 | Single- or three-phase | KD | Universal | (1) 250–500 | BKKD350 |
| | 400 | Single- or three-phase | KD | Universal | (2) 3/0–250 or (1) 3/0–500 | BKKD400 |

① Order optional lug kit catalog no. 3TA225FDK for 175–225 A ED- and FD-Frame three-pole circuit breakers to provide terminations for (1) #6–300 kcmil.

Note: KD kits are to be used on 400 A and 600 A panels only.

Universal main circuit breaker kits— top or bottom mounting

Kits—main circuit breaker (includes circuit breaker and terminals)

| Max. volt. | Ampere rating | Service | Breaker frame | Mounting location | Wire range Al/Cu (in kcmil) | Catalog number |
|------------|---------------|------------------------|---------------|-------------------|-----------------------------|-----------------|
| 480 Vac | 250 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD250 |
| | 300 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD300 |
| | 350 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD350 |
| | 400 | Single- or three-phase | HKD | Universal | (1) 250–500 | BKHKD400 |
| 480 Vac | 400 | Single- or three-phase | LG | Universal | (1) #2–500 | BKLGE400 |
| | 500 | Single- or three-phase | LG | Universal | (2) #2–500 | BKLGE500 |
| | 600 | Single- or three-phase | LG | Universal | (2) #2–500 | BKLGE600 |

Lug kits and accessories

Standard main/sub-feed breaker lug capacities

| Ampere rating | Lug wire range Al/Cu |
|---------------|--|
| 100 | (1) #14–1/0 |
| 125–225 | (1) #4–4/0 |
| 250–350 | (1) 250–500 kcmil |
| 400 | (2) 3/0–250 kcmil or (1) 3/0–500 kcmil |

Main/through-feed lug kits

| Ampere rating | Wire range Al/Cu | Catalog number |
|---------------|------------------|------------------|
| 100 | (1) #14–1/0 | LUGKIT100 |
| 225 | (1) #6–300 kcmil | LUGKIT225 |
| 400 | (2) #2–500 kcmil | LUGKIT400 |
| 600 | (2) #2–500 kcmil | LUGKIT600 |

Kits

| Description | Catalog number | | |
|--|----------------------------------|-----------------|-------------------|
| | 100 A | 225 A | 400/600 A |
| Service entrance kit—MLO | SEK1/2 ① | SEK1/2 ① | SEK4/6 ① |
| Service entrance kit—MCB | SEKB ②④ SEKG ③④ | SEKF ④⑤ | SEKKL ④⑥ |
| 200% neutral kit | 2NK100 | 2NK225 | 1NK400 |
| Sub-feed breaker adapter (used to mount 225 A sub-feed breaker in 400 A panels) | — | — | 225ASFBKIT |
| Sub-feed breaker adapter (used to mount 225 A sub-feed breaker in 600 A panels) | — | — | 225BSFBKIT |
| Sub-feed breaker adapter (used to mount 400 A sub-feed breaker in 600 A panels) | — | — | 400ASFBKIT |

① Applicable for use with MLO, SE panels only.

② Only applicable for SE PRL1a with chassis-mounted BAB, QBH main breaker.

③ Only applicable for SE PRL2a with chassis-mounted GHB main breaker.

④ Main breaker panels only—includes barrier kit and bonding jumper.

⑤ To be used with F-frame main breaker.

⑥ To be used with K- and L-frame main breaker.

Accessories

| Description | Catalog number |
|-------------------------|-------------------|
| Isolated ground bar kit | ISOGROUND |
| Copper ground bar kit | CUGROUND |
| 1P filler plate ① | 5155C62H01 |
| Series rating kit ② | SRK |

① Each PRS panel comes with 50% filler plates, e.g., 18 circuit interior contains 9 filler plates.

② Series rating kit includes series rating book and adhesive sleeve and series rating sticker. If panelboard is being series rated higher than the base rating, an SRK is required.

Questions to ask

Step 1

1

Q Which type of switch do you need?

- A**
- Heavy-duty (DH)
 - General-duty (DG)
 - Double-throw (DT)

Step 2

2

Q What current (ampere) rating do you need?

- A**
- 30, 60, 100, 200, 400, 600, 800, 1200

Step 3

3

Q Should it be fused, non-fused or fusible with neutral?

- A**
- F = Fusible without neutral
 - U = Non-fusible
 - N = Fusible with neutral

Step 4

4

Q How many poles?

- A**
- 1, 2, 3, 4, 6

Step 5

5

Q Choose the maximum circuit voltage.

- A**
- 240 Vac
 - 600 Vac

Step 6


6

Q What type of enclosure do you need?

- A**
- NEMA 1
 - NEMA 3R
 - NEMA 12
 - NEMA 4 painted steel
 - NEMA 4X stainless steel
 - NEMA 4X non-metallic

Safety switches/ disconnects

Catalog numbering system—safety switches

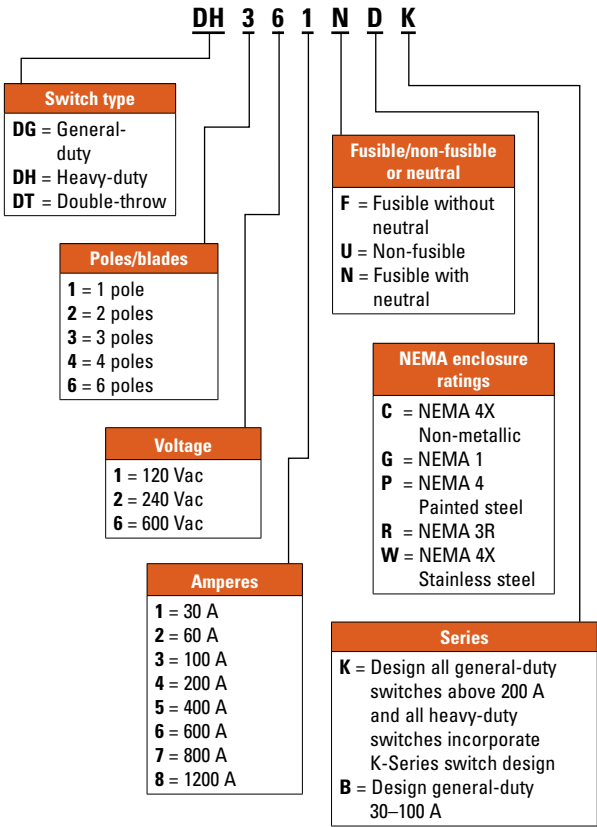

General-duty safety switches (disconnects)

Two-pole—240 Vac (suitable for service entrance use with a neutral or ground kit)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings | | Catalog number |
|-----------------------|----------------------|----------------|-----------------|---------|----------------|
| | | | Single-phase | | |
| | | | 120 Vac | 240 Vac | |
| 30 | Fusible with neutral | NEMA 1 | | 1.5–3 | DG221NGB |
| 30 | Non-fusible | NEMA 1 | 2 | 3 | DG221UGB |
| 30 | Fusible with neutral | NEMA 3R | | 1.5–3 | DG221NRB |
| 30 | Non-fusible | NEMA 3R | 2 | 3 | DG221URB |
| 60 | Fusible with neutral | NEMA 1 | | 3–10 | DG222NGB |
| 60 | Non-fusible | NEMA 1 | 3 | 10 | DG222UGB |
| 60 | Fusible with neutral | NEMA 3R | | 3–10 | DG222NRB |
| 60 | Non-fusible | NEMA 3R | 1 | 10 | DG222URB |
| 100 | Fusible with neutral | NEMA 1 | | 7.5–15 | DG223NGB |
| 100 | Non-fusible | NEMA 1 | | 15 | DG223UGB |
| 100 | Fusible with neutral | NEMA 3R | | 7.5–15 | DG223NRB |
| 100 | Non-fusible | NEMA 3R | | 15 | DG223URB |

Three-pole—240 Vac (suitable for service entrance use with a neutral or ground lug kit)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings ① | | Catalog number |
|-----------------------|----------------------|----------------|-------------------|-------------|----------------|
| | | | Single-phase | Three-phase | |
| | | | 240 Vac | 240 Vac | |
| 30 | Fusible with neutral | NEMA 1 | 1.5–3 | 3–7.5 | DG321NGB |
| 30 | Non-fusible | NEMA 1 | 3 | 7.5 | DG321UGB |
| 30 | Fusible with neutral | NEMA 3R | 1.5–3 | 3–7.5 | DG321NRB |
| 30 | Non-fusible | NEMA 3R | 3 | 7.5 | DG321URB |
| 60 | Fusible with neutral | NEMA 1 | 3–10 | 7.5–15 | DG322NGB |
| 60 | Non-fusible | NEMA 1 | 10 | 15 | DG322UGB |
| 60 | Fusible with neutral | NEMA 3R | 3–10 | 7.5–15 | DG322NRB |
| 60 | Non-fusible | NEMA 3R | 10 | 15 | DG322URB |
| 100 | Fusible with neutral | NEMA 1 | 7.5–15 | 15–30 | DG323NGB |
| 100 | Non-fusible | NEMA 1 | 15 | 30 | DG323UGB |
| 100 | Fusible with neutral | NEMA 3R | 7.5–15 | 15–30 | DG323NRB |
| 100 | Non-fusible | NEMA 3R | 15 | 30 | DG323URB |

① Maximum hp ratings for fusible units apply only when dual element time-delay fuses are used.

Neutral and ground lug kits

| Description | Catalog number |
|--------------------------------------|----------------|
| Neutral kit for 30 A switches | DG030NB |
| Neutral kit for 60–100 A switches | DG100NB |
| Ground lug kit for 30–100 A switches | DG030GB |

Class R fuse adapter kits

| Ampere rating | Type | Voltage | Catalog number |
|---------------|--------------|---------|----------------|
| 30 | General-duty | 240 | DG30RB |
| 60 | General-duty | 240 | DS16FK |
| 100 | General-duty | 240 | DG100RB |

Heavy-duty safety switches (disconnects)

Three-pole—480–600 Vac (suitable for service entrance use with a neutral or ground lug kit below)

| Current rating (amps) | Type | Enclosure type | Max. hp ratings | | | | Catalog number |
|-----------------------|-------------|----------------|-----------------|-------|-------------|-------|-------------------|
| | | | Single-phase | | Three-phase | | |
| | | | 480 V | 600 V | 480 V | 600 V | |
| 30 | Fusible | NEMA 1 | 7.5 | 15 | 10 | 20 | DH361FGK ❶ |
| 30 | Non-fusible | NEMA 1 | 7.5 | 15 | 10 | 20 | DH361UGK |
| 30 | Fusible | NEMA 3R | 7.5 | 15 | 10 | 20 | DH361FRK ❶ |
| 30 | Non-fusible | NEMA 3R | 7.5 | 15 | 10 | 20 | DH361URK |
| 30 | Fusible | NEMA 4X | 7.5 | 10 | 15 | 20 | DH361FWK ❶ |
| 30 | Non-fusible | NEMA 4X | 7.5 | 10 | 20 | 30 | DH361UWK |
| 60 | Fusible | NEMA 1 | 20 | 30 | 25 | 50 | DH362FGK |
| 60 | Non-fusible | NEMA 1 | 20 | 30 | 25 | 50 | DH362UGK |
| 60 | Fusible | NEMA 3R | 20 | 30 | 25 | 50 | DH362FRK |
| 60 | Non-fusible | NEMA 3R | 20 | 30 | 25 | 50 | DH362URK |
| 60 | Fusible | NEMA 4X | 20 | 25 | 30 | 50 | DH362FWK |
| 60 | Non-fusible | NEMA 4X | 20 | 25 | 50 | 60 | DH362UWK |
| 100 | Fusible | NEMA 1 | 30 | 60 | 40 | 75 | DH363FGK |
| 100 | Non-fusible | NEMA 1 | 30 | 60 | 40 | 75 | DH363UGK |
| 100 | Fusible | NEMA 3R | 30 | 60 | 40 | 75 | DH363FRK |
| 100 | Non-fusible | NEMA 3R | 30 | 60 | 40 | 75 | DH363URK |
| 100 | Fusible | NEMA 4X | 30 | 40 | 60 | 75 | DH363FWK |
| 100 | Non-fusible | NEMA 4X | 40 | 50 | 75 | 100 | DH363UWK |
| 200 | Fusible | NEMA 1 | 50 | 125 | 50 | 150 | DH364FGK |
| 200 | Non-fusible | NEMA 1 | 50 | 125 | 50 | 150 | DH364UGK |
| 200 | Fusible | NEMA 3R | 50 | 125 | 50 | 150 | DH364FRK |
| 200 | Non-fusible | NEMA 3R | 50 | 125 | 50 | 150 | DH364URK |
| 200 | Fusible | NEMA 4X | 50 | 50 | 125 | 150 | DH364FWK |
| 200 | Non-fusible | NEMA 4X | 50 | 50 | 125 | 125 | DH364UWK |

❶ For 30 A switches requiring Class J fusing, switch must be ordered with the Class J clips from the factory by adding a suffix "J" on the end.

Safety switch kits

Neutral and ground lug kits ①

| Description | Catalog number |
|--------------------------------------|----------------|
| Neutral kit for 30–60 A switches | DH030NK |
| Neutral kit for 100 A switches | DH100NK |
| Neutral kit for 200 A switches | DG200NK |
| Ground lug kit for 30–100 A switches | DS100GK |
| Ground lug kit for 200 A switches | DS200GK |

- ① A factory-installed ground lug is supplied on all NEMA 4, 4X and 12 safety switches, as well as all 400 A and higher NEMA 1 and 3R safety switches. A factory-installed ground lug is also supplied on all heavy-duty NEMA 1 and 3R 30–200 A switches that do not have a factory installed neutral.

Class R fuse adapter kits

| Ampere rating | Type | Voltage | Catalog number |
|---------------|------------|---------|----------------|
| 30 | Heavy-duty | 600 | DS16FK |
| 60 | Heavy-duty | 600 | DS26FK |
| 100 | Heavy-duty | 600 | DS36FK |
| 200 | Heavy-duty | 600 | DS346FK |

Class J fuse adapter kit ①

| Ampere rating | Type | Voltage | Catalog number |
|---------------|------------|---------|----------------|
| 60 | Heavy-duty | 600 | DS26JK |

- ① 30 A switches must be ordered from the factory with Class J fuse provisions by adding suffix “J” at the end of the switch catalog number. 100 A and 200 A switches can be field modified by moving the load side fuse base.

Questions to ask

Step 1

1

Q How many phases?

A — Single-phase
— Three-phase

Step 2

2

Q What type of enclosure is required?

A — Ventilated
— Encapsulated

Step 3

3

Q What is the primary voltage? (input voltage)

A — Single-phase is 240 V x 480 V
— Three-phase is 480 V delta (three-phase, three-wire)

Step 4

4

Q What is the secondary voltage? (output voltage)

A — Single-phase
— 120/240

— Three-phase
— 208Y/120 (three-phase, four-wire) or 240 V delta

Step 5

5

Q What kVA transformer is required?

A — If single-phase encapsulated, kVAs are:
0.05, 0.075, 0.1, 0.15, 0.25, 0.5, 0.75, 1,
1.5, 2, 3, 5, 7.5, 10, 15, 25, 37.5
— If single-phase ventilated, kVAs are:
15, 25, 37.5, 50, 75, 100, 167
— If three-phase encapsulated, kVAs are:
3, 6, 9, 15, 30, 45, 75
— If three-phase ventilated, kVAs are:
15, 30, 45, 75, 112.5, 150, 225, 300

Step 6


6

Q If a ventilated transformer was selected

A — Field kits: lug kits or weathershields
— Select from selection tables


Transformers

Catalog numbering system—DOE 2016 ventilated transformers

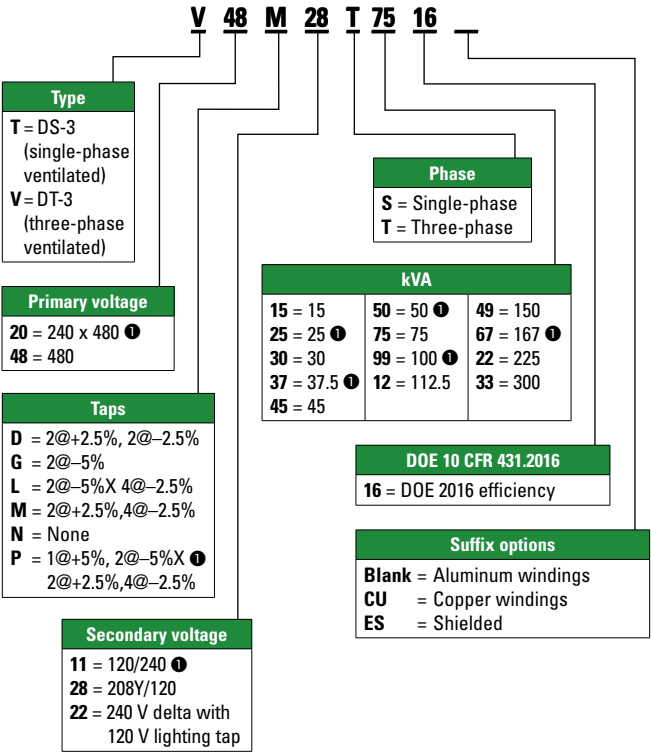

① Typically used with single-phase transformers.

Catalog numbering system—encapsulated transformers

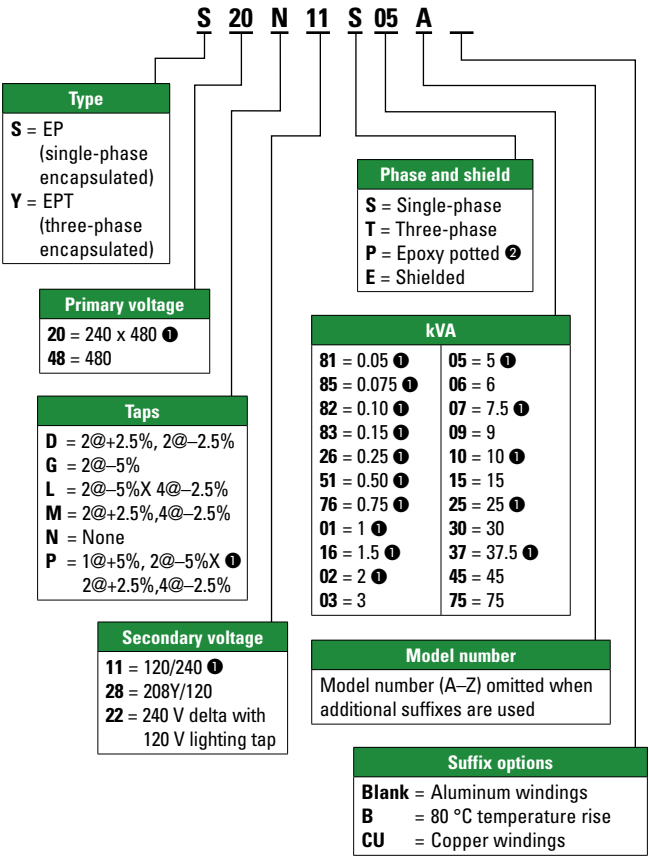

❶ Typically used with single-phase transformers.

❷ Single-phase 0.25–2 kVA encapsulated transformers only.

General-purpose transformers

Three-phase ventilated, 480 delta—208 Y/120, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|-------|--------------|----------------|---------------|-----------------|----------------|
| 15 | 939 | 280B | WS57 | LKS1 | V48M28T1516 ① |
| 30 | 940 | 280B | WS58 | LKS1 | V48M28T3016 ① |
| 45 | 940 | 280B | WS58 | LKS1 | V48M28T4516 ① |
| 75 | 942 | 280B | WS59 | LKS2 | V48M28T7516 ② |
| 112.5 | 943 | 280B | WS60 | LKS2 | V48M28T1216 ② |
| 150 | 943 | 280B | WS60 | LKS3 | V48M28T4916 ② |
| 225 | 944 | 280B | WS61 | LKS3 | V48M28T2216 |
| 300 | 945 | 280B | WS62 | LKS3 | V48M28T3316 |

① Suitable for use with wall-mounted bracket WMB05.

② Suitable for use with wall-mounted bracket WMB04.

Three-phase ventilated, 480 delta—240/120 lighting tap, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|-------|--------------|----------------|---------------|-----------------|----------------|
| 15 | 939 | 282B | WS57 | LKS1 | V48M22T1516 ① |
| 30 | 940 | 282B | WS58 | LKS1 | V48M22T3016 ① |
| 45 | 940 | 282B | WS58 | LKS1 | V48M22T4516 ① |
| 75 | 942 | 282B | WS59 | LKS2 | V48M22T7516 ② |
| 112.5 | 943 | 282B | WS60 | LKS2 | V48M22T1216 ② |
| 150 | 943 | 282B | WS60 | LKS3 | V48M22T4916 ② |
| 225 | 944 | 282B | WS61 | LKS3 | V48M22T2216 |
| 300 | 945 | 282B | WS62 | LKS3 | V48M22T3316 |

① Suitable for use with wall-mounted bracket WMB05.

② Suitable for use with wall-mounted bracket WMB04.

Three-phase encapsulated, 480 delta—208 Y/120, 115 °C rise

| kVA | Frame number | Wiring diagram | Catalog number |
|-----|--------------|----------------|----------------|
| 3 | 201 | 70A | Y48G28T03N |
| 6 | 200 | 70A | Y48G28T06N |
| 9 | 103 | 70A | Y48G28T09N |
| 15 | 95 | 72B | Y48D28T15N |
| 30 | 243 | 84A | Y48M28T30N |
| 45 | 244 | 84A | Y48M28T45N |
| 75 | 245 | 84A | Y48M28T75N |

Note: For frame drawings and wiring diagrams, refer to www.eaton.com/transformers.

General-purpose transformers

Single-phase ventilated, 240 x 480–120/240, 150 °C rise, aluminum windings, DOE 2016

| kVA | Frame number | Wiring diagram | Weathershield | Typical lug kit | Catalog number |
|------|--------------|----------------|---------------|-----------------|----------------------|
| 15 | 842 | 3XA | WS45 | LKS1 | T20P11S1516 ① |
| 25 | 842 | 3XA | WS45 | LKS1 | T20P11S2516 ① |
| 37.5 | 843 | 3XA | WS43 | LKS1 | T20P11S3716 |
| 50 | 843 | 3XA | WS43 | LKS2 | T20P11S5016 |
| 75 | 844 | 3XA | WS44 | LKS2 | T20P11S7516 |
| 100 | 844 | 3XA | WS44 | LKS3 | T20P11S9916 |
| 167 | 814 | 288A | WS13 | LKS3 | T48P11S6716 ② |

① Suitable for use with wall-mounted bracket WMB01.

② 480 V primary only.

Single-phase encapsulated 240 x 480–120/240, 115 °C rise

| kVA | Frame number | Wiring diagram | Catalog number |
|-------|--------------|----------------|-------------------|
| 0.05 | 52 | 3A | S20N11S81N |
| 0.075 | 53 | 3A | S20N11S85N |
| 0.1 | 54 | 3A | S20N11S82N |
| 0.15 | 55 | 3A | S20N11S83N |
| 0.25 | 57P | 3A | S20N11P26P |
| 0.5 | 57P | 3A | S20N11P51P |
| 0.75 | 58P | 3A | S20N11P76P |
| 1 | 67P | 3A | S20N11P01P |
| 1.5 | 67P | 3A | S20N11P16P |
| 2 | 68P | 3A | S20N11P02P |
| 3 | 176 | 3A | S20N11S03N |
| 5 | 177 | 3A | S20N11S05N |
| 7.5 | 178 | 3A | S20N11S07N |
| 10 | 179 | 3A | S20N11S10N |
| 15 | 180 | 3A | S20N11S15N |
| 25 | 182 | 23A | S20L11S25N |
| 37.5 | 300A | 248A | S20L11S37 |

Note: For frame drawings and wiring diagrams, refer to www.eaton.com/transformers.

General-purpose transformers sizing tables

Three-phase transformer full load current

| kVA | Rated line-line voltage | | | | | | |
|-------|-------------------------|--------|--------|-------|-------|-------|-------|
| | 208 | 240 | 480 | 600 | 2400 | 4160 | 4800 |
| 3 | 8.3 | 7.2 | 3.6 | 2.9 | 0.7 | 0.4 | 0.4 |
| 6 | 16.7 | 14.4 | 7.2 | 5.8 | 1.4 | 0.8 | 0.7 |
| 9 | 25.0 | 21.7 | 10.8 | 8.7 | 2.2 | 1.2 | 1.1 |
| 15 | 41.6 | 36.1 | 18.0 | 14.4 | 3.6 | 2.1 | 1.8 |
| 30 | 83.3 | 72.2 | 36.1 | 28.9 | 7.2 | 4.2 | 3.6 |
| 45 | 124.9 | 108.3 | 54.1 | 43.3 | 10.8 | 6.2 | 5.4 |
| 75 | 208.2 | 180.4 | 90.2 | 72.2 | 18.0 | 10.4 | 9.0 |
| 112.5 | 312.3 | 270.6 | 135.3 | 108.3 | 27.1 | 15.6 | 13.5 |
| 150 | 416.4 | 360.9 | 180.4 | 144.3 | 36.1 | 20.8 | 18.0 |
| 225 | 624.6 | 541.3 | 270.6 | 216.5 | 54.1 | 31.2 | 27.1 |
| 300 | 832.7 | 721.7 | 360.9 | 288.7 | 72.2 | 41.6 | 36.1 |
| 500 | 1387.9 | 1202.8 | 601.4 | 481.1 | 120.3 | 69.4 | 60.1 |
| 750 | 2081.9 | 1804.3 | 902.1 | 721.7 | 180.4 | 104.1 | 90.2 |
| 1000 | 2775.8 | 2405.7 | 1202.8 | 962.3 | 240.6 | 138.8 | 120.3 |

Note: Line current = (kVA x 1000) / (line voltage x 1.732).

Single-phase transformer full load current

| kVA | Rated line-line voltage | | | | | | | | |
|------|-------------------------|--------|--------|--------|-------|-------|-------|------|------|
| | 120 | 208 | 240 | 277 | 480 | 600 | 2400 | 4160 | 4800 |
| 0.5 | 4.2 | 2.4 | 2.1 | 1.8 | 1.0 | 0.8 | 0.2 | 0.1 | 0.1 |
| 1 | 8.3 | 4.8 | 4.2 | 3.6 | 2.1 | 1.7 | 0.4 | 0.2 | 0.2 |
| 1.5 | 12.5 | 7.2 | 6.3 | 5.4 | 3.1 | 2.5 | 0.6 | 0.4 | 0.3 |
| 2 | 16.7 | 9.6 | 8.3 | 7.2 | 4.2 | 3.3 | 0.8 | 0.5 | 0.4 |
| 3 | 25.0 | 14.4 | 12.5 | 10.8 | 6.3 | 5.0 | 1.3 | 0.7 | 0.6 |
| 5 | 41.7 | 24.0 | 20.8 | 18.1 | 10.4 | 8.3 | 2.1 | 1.2 | 1.0 |
| 7.5 | 62.5 | 36.1 | 31.3 | 27.1 | 15.6 | 12.5 | 3.1 | 1.8 | 1.6 |
| 10 | 83.3 | 48.1 | 41.7 | 36.1 | 20.8 | 16.7 | 4.2 | 2.4 | 2.1 |
| 15 | 125.0 | 72.1 | 62.5 | 54.2 | 31.3 | 25.0 | 6.3 | 3.6 | 3.1 |
| 25 | 208.3 | 120.2 | 104.2 | 90.3 | 52.1 | 41.7 | 10.4 | 6.0 | 5.2 |
| 37.5 | 312.5 | 180.3 | 156.3 | 135.4 | 78.1 | 62.5 | 15.6 | 9.0 | 7.8 |
| 50 | 416.7 | 240.4 | 208.3 | 180.5 | 104.2 | 83.3 | 20.8 | 12.0 | 10.4 |
| 75 | 625.0 | 360.6 | 312.5 | 270.8 | 156.3 | 125.0 | 31.3 | 18.0 | 15.6 |
| 100 | 833.3 | 480.8 | 416.7 | 361.0 | 208.3 | 166.7 | 41.7 | 24.0 | 20.8 |
| 167 | 1391.7 | 802.9 | 695.8 | 602.9 | 347.9 | 278.3 | 69.6 | 40.1 | 34.8 |
| 250 | 2083.3 | 1201.9 | 1041.7 | 902.5 | 520.8 | 416.7 | 104.2 | 60.1 | 52.1 |
| 333 | 2775.0 | 1601.0 | 1387.5 | 1202.2 | 693.8 | 555.0 | 138.8 | 80.0 | 69.4 |

Note: Line current = (kVA x 1000) / line voltage.

Questions to ask

Step 1

1

Q What type of enclosure do you need?

- A**
- NEMA 1 (general-duty)
 - NEMA 3R (rain-tight)
 - NEMA 12 (dust-tight)
 - NEMA 4X (wash-down)

Step 2

2

Q What type of starter do you need?

- A**
- NEMA non-combination
 - NEMA combination, non-fusible or fusible
 - NEMA combination, breaker
 - Lighting contactor

Step 3

3

Q What is the horsepower and voltage of the motor?
(Note: this will determine the NEMA starter size)

- A**
- Horsepower: 1, 5, 10, 25 hp etc.
 - Motor voltage: 200, 230, 460, 575 V

Step 4

4

Q What is the control voltage for the coil?

- A**
- 120 Vac
 - 240 Vac
 - 480 Vac

Step 5

5

Q What size overload relay is needed?

- A**
- 1–5 FLA
 - 4–20 FLA
 - 9–45 FLA

Step 6


6

Q What additional accessories do you need?

- A**
- Cover control kits, such as HAND/OFF/AUTO selector switch or STOP/START pushbuttons
 - CPT kits
 - Fuse kits

Enclosed control

Catalog numbering system—non-combination and combination NEMA enclosed starters

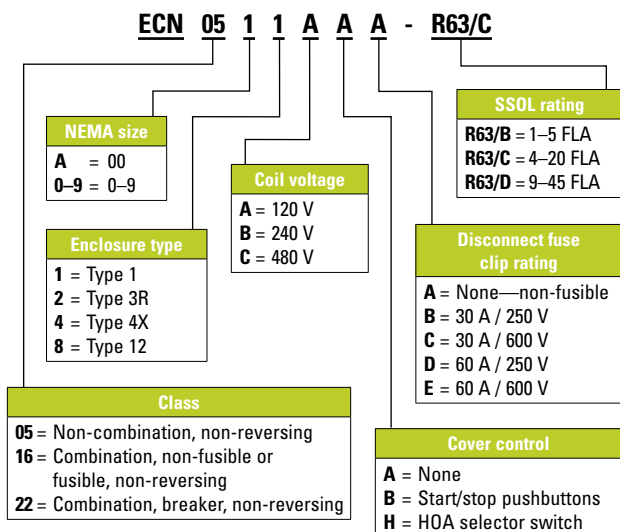

Starters

NEMA non-combination, non-reversing starters, Type 1

| NEMA size | Motor voltage | Maximum hp rating | Magnet coil voltage | SSOL range | Catalog number |
|-----------|---------------|-------------------|---------------------|------------|------------------|
| 00 | 200, 230 | 1-1/2 | 120 | 1-5 | ECN05A1AAA-R63/B |
| | 460 | 2 | 120 | 1-5 | ECN05A1AAA-R63/B |
| 0 | 200, 230 | 3 | 120 | 1-5 | ECN0501AAA-R63/B |
| | 460 | 5 | 120 | 1-5 | ECN0501AAA-R63/B |
| | 200, 230 | 3 | 120 | 4-20 | ECN0501AAA-R63/C |
| | 460 | 5 | 120 | 4-20 | ECN0501AAA-R63/C |
| 1 | 200, 230 | 7-1/2 | 120 | 4-20 | ECN0511AAA-R63/C |
| | 460 | 10 | 120 | 4-20 | ECN0511AAA-R63/C |
| 2 | 200, 230 | 10 | 120 | 9-45 | ECN0521AAA-R63/D |
| | 460 | 25 | 120 | 9-45 | ECN0521AAA-R63/D |

NEMA combination, non-reversing starters, non-fusible disconnect Type 1

| NEMA size | Motor voltage | Maximum hp rating | Magnet coil voltage | SSOL range | Catalog number |
|-----------|---------------|-------------------|---------------------|------------|------------------|
| 00 | 200, 230 | 1-1/2 | 120 | 1-5 | ECN16A1AAA-R63/B |
| | 460 | 2 | 120 | 1-5 | ECN16A1AAA-R63/B |
| 0 | 200, 230 | 3 | 120 | 1-5 | ECN1601AAA-R63/B |
| | 460 | 5 | 120 | 1-5 | ECN1601AAA-R63/B |
| | 200, 230 | 3 | 120 | 4-20 | ECN1601AAA-R63/C |
| | 460 | 5 | 120 | 4-20 | ECN1601AAA-R63/C |
| 1 | 200, 230 | 7-1/2 | 120 | 4-20 | ECN1611AAA-R63/C |
| | 460 | 10 | 120 | 4-20 | ECN1611AAA-R63/C |
| 2 | 200, 230 | 10 | 120 | 9-45 | ECN1621AAA-R63/D |
| | 460 | 25 | 120 | 9-45 | ECN1621AAA-R63/D |

Starters

NEMA enclosures with CPT modifications

To order an enclosure with CPT:

1. Change ECN05 to ECN07 for non-combination units, and ECN16 to ECN18 for combination units.
2. Change the "A" in the 7th catalog string to the correct letter based on the below table:

| Catalog string letter | Primary | Secondary |
|------------------------------|---------------------------------|------------------|
| E | 208/60 | 120/60 |
| B | 240/480–220/440 wired for 240 V | 120/60–110/50 |
| C | 240/480–220/440 wired for 480 V | 120/60–110/50 |


NEMA accessories—CPT and fuse kits

| Description | Catalog number |
|---|-----------------------|
| 100 VA CPT kit (208/277 V primary, 120 V secondary) | C341CE |
| 100 VA CPT kit (240/480 V primary, 120 V secondary) | C341CC |
| Fuse clip kit for combination starter—30 A / 250 V | C351KC21 |
| Fuse clip kit for combination starter—30 A / 600 V and 60 A / 250 V | C351KD22-61 |

NEMA accessories—cover control kits

| Description | Catalog number | | |
|---|--|---|---|
| | Non-combination Type 1, size 00–2 | Non-combination Type 1, size 3–5 | Combination Type 1 and all Type 3R, 12, 4X |
| STOP/START pushbuttons | C600M1 | C400GK1 | C400T1 |
| STOP/START pushbuttons with red RUN light (85–264 Vac) | C600M101A | C400GK12 | — |
| HAND/OFF/AUTO selector switch | C600M12 | C400GK3 | C400T12 |
| HAND/OFF/AUTO selector switch with red RUN light (85–264 Vac) | C600M121A | C400GK32 | — |

Catalog numbering system—enclosed lighting contactors

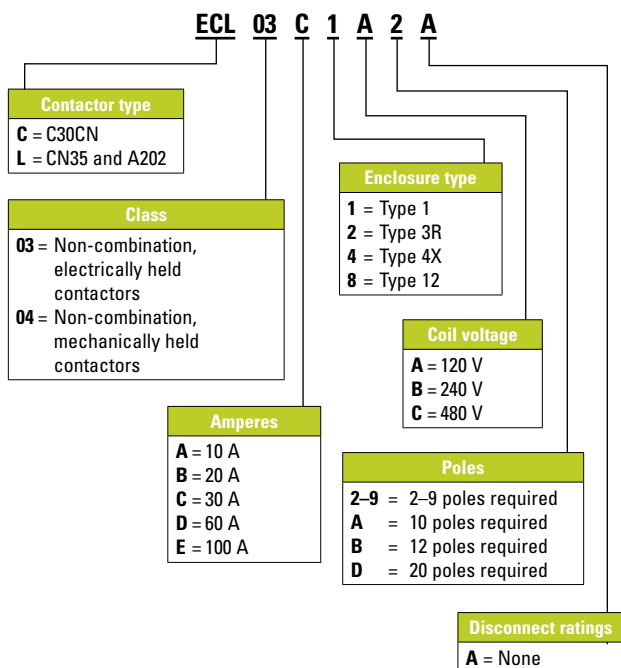

Lighting contactors

Lighting non-combination contactors, Type 1

| Contactor type | Number of poles | Ampere rating | Coil voltage | Catalog number |
|--------------------------|-----------------|---------------|--------------|-------------------|
| C30CN, electrically held | 2 | 30 | 120 | ECC03C1A2A |
| C30CN, electrically held | 4 | 30 | 120 | ECC03C1A4A |
| C30CN, electrically held | 6 | 30 | 120 | ECC03C1A6A |
| CN35, electrically held | 2 | 20 | 120 | ECL03B1A2A |
| CN35, electrically held | 4 | 20 | 120 | ECL03B1A4A |
| CN35, electrically held | 6 | 20 | 120 | ECL03B1A6A |

Questions to ask

Step

1

Q Do you need an assembled pushbutton station or loose components in clam-shell packaging?

A — Assembled pushbutton station
— Loose components in clam-shell package

Step

2

For pushbutton stations

Q What size of pushbutton station do you need?

A — 22 mm
— 30 mm

Q How many elements (operators) do you want?

A — 1
— 2
— 3

Step

3

For loose components

Q What type of operator do you need?

A — Emergency stop operator
— Momentary pushbutton
— Indicating light
— Illuminated pushbutton
— Selector switches

Pushbutton stations and pushbuttons

Pushbutton stations

30 mm pushbutton stations

| Description | Catalog number |
|--|-------------------|
| Single-element | |
| Emergency Off—break glass pushbutton station, NC | 10250TGR |
| Man-Off-Auto selector switch pushbutton station, 2NO | 10250T3524 |
| Stop mushroom head pushbutton station, 1NC | 10250T3519 |
| Two-element | |
| Start-Stop pushbutton station, 1NO-2NC | 10250T3525 |
| Start-Stop rectangular pushbutton station, 1NO-1NC | 10250H5200 |
| Three-element | |
| Open-Close-Stop pushbutton station, 2NO-3NC | 10250T3614 |
| Up-Down-Stop rectangular pushbutton station, 2NO-1NC | 10250H5301 |

22 mm pushbutton stations

| Description | Catalog number |
|--|-------------------|
| Single-element | |
| 40 mm mushroom head push-pull emergency stop operator, NC | M22-C1-M1H |
| 40 mm illuminated mushroom head push-pull emergency stop operator, 85–264 Vac, NO-NC | M22-C1-M2H |
| Two-element | |
| Flush pushbutton, Start-Stop, NO-NC | M22-C2-M2V |
| Flush pushbutton, Forward-Reverse, 2NO | M22-C2-M3V |
| Three-element | |
| Flush pushbutton, Open-Stop-Close, 2NO-1NC | M22-C3-M4V |
| Flush pushbutton, Forward-Stop-Reverse, 2NO-1NC | M22-C3-M5V |
| Flush pushbutton, Up-Stop-Down, 2NO-NC | M22-C3-M6V |

Pushbutton components

Individually packaged 30 mm pushbuttons and operators NEMA 4, 4X, 12 13

| Description | Catalog number |
|--|--------------------|
| Emergency stop operator | |
| Red non-illuminated push-pull, 1NO-1NC, includes 2 legend plates: EMERG. STOP and STOP | 10250T5B62-1-POP |
| Jumbo mushroom pushbutton, 1NO-1NC, button engraved EMERG. STOP (button is engraved—no legend plate provided) | 10250T33-POP |
| Red mushroom pushbutton engraved EMERG. STOP, 1NO-1NC, includes 2 legend plates: EMERG. STOP and STOP | 10250T32R-POP |
| Momentary pushbutton | |
| Black flush pushbutton, 1NO-1NC, includes 1 legend plate: START and JOG | 10250T30B-POP |
| Red extended pushbutton, 1NO-1NC, includes 1 legend plate: STOP | 10250T31R-POP |
| Indicating light | |
| Red indicating light transformer 120 Vac with two extra lenses (green and amber), 1NO-1NC, includes 2 legend plates: RUN and JOG | 10250T34R-POP |
| Illuminated pushbutton | |
| Red illuminated pushbutton (120 Vac/Vdc), with 2 extra lenses (green and amber), 1NO-1NC, includes 1 legend plate: Power On | 10250T411C21-1-POP |
| Selector switches | |
| Two-position selector switch, 1NO-1NC, includes 3 legend plates: Off/On, Hand/Auto and Run/Jog | 10250T20KB-POP |
| Three-position selector switch, 2NO-2NC, includes 1 legend plate: Hand/Off/Auto | 10250T22KB-POP |
| Three-position selector switch, 1NO-1NC, includes 1 legend plate: Hand/Off/Auto | 10250T21KB-POP |

Questions to ask

Step

1

Q What is the motor nameplate information?

- A**
- System (AC or DC) and voltage?
 - If AC, is the motor single-phase or three-phase?
 - What is the motor horsepower?

Step

2

Q What type of enclosure is needed?

- A**
- No enclosure (will be mounted in separate enclosure)
 - NEMA 1 enclosure

Step

3

Q Is overload protection required?

- A**
- No
 - Yes. If yes, what is the motor full load amperes (FLA)?

Step

4

Q What type of operator does the customer want?

- A**
- Button
 - Toggle

Manual starters

Manual starters

Manual motor switches without overload

| Type | Pole config. | Maximum motor (hp) | | | | Catalog number | |
|-------|--------------|--------------------|-------|-------|-------|----------------|----------|
| | | 120 V | 240 V | 480 V | 230 V | Open | Enclosed |
| B230A | Two-pole | 2 | 5 | — | — | B230AN | B230AG |
| B230B | Two-pole | 2 | 5 | 10 | 15 | B230BND | B230BGD |
| | Three-pole | 3 | 7.5 | 15 | 20 | B330AND | B330AGD |

Single-phase manual starters with overload protection— Type MS series starters ①

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------|-----------|--------------------|---------|---------|----------------|------------|
| | | AC voltage | | | Open | Enclosed ② |
| | | 120 Vac | 240 Vac | 277 Vac | | |
| Single-pole | 0 | 1 | 1 | 1 | MST01 | MST01SN1P |
| Two-pole | 0 | 1 | 1 | 1 | MST02 | MST02SN1P |

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------|-----------|--------------------|---------|--------|----------------|------------|
| | | DC voltage | | | Open | Enclosed ② |
| | | 120 Vdc | 240 Vdc | 32 Vdc | | |
| Single-pole | 0 | ¼ | ¼ | ¼ | MST01 | MST01SN1P |
| Two-pole | 0 | ¼ | ¼ | ¼ | MST02 | MST02SN1P |

① Use MSH heaters for MS series starters.

② With pilot light.

Single- and three-phase manual starters with overload protection— Type B100 ①

| Pole config. | NEMA size | Maximum motor (hp) | | | Catalog number | |
|--------------------------|-----------|--------------------|-------------|-------------|----------------|------------|
| | | AC voltage | | | Open | Enclosed ② |
| | | 120 Vac | 208–240 Vac | 480–600 Vac | | |
| Two-pole (single-phase) | 0 | 1 | 2 | — | B100M0B | B100S0B |
| | 1 | 2 | 3 | — | B100M1B | B100S1B |
| Three-pole (three-phase) | 0 | 2 | 3 | 5 | B100M0C | B100S0C |
| | 1 | 3 | 7½ | 10 | B100M1C | B100S1C |

| Pole config. | NEMA size | Maximum motor (hp) | | Catalog number | |
|--------------------------|-----------|--------------------|---------|----------------|------------|
| | | DC voltage | | Open | Enclosed ② |
| | | 115 Vdc | 230 Vdc | | |
| Two-pole (single-phase) | 0 | 1 | 1½ | B100M0B | B100S0B |
| | 1 | 1½ | 2 | B100M1B | B100S1B |
| Three-pole (three-phase) | 0 | — | — | B100M0C | B100S0C |
| | 1 | — | — | B100M1C | B100S1C |

① Use FH heaters for Type B100 starters.

② NEMA 1.

* At Eaton, we believe that power is a fundamental part of just about everything people do. Technology, transportation, energy and infrastructure—these are things the world relies on every day. That's why Eaton is dedicated to helping our customers find new ways to manage electrical, hydraulic and mechanical power more efficiently, safely and sustainably. To improve people's lives, the communities where we live and work, and the planet our future generations depend upon. Because that's what really matters. And we're here to make sure it works.

See more at [Eaton.com/whatmatters](https://www.eaton.com/whatmatters)

For more information, visit
[Eaton.com/powrstock](https://www.eaton.com/powrstock)

Eaton is a registered trademark.

All other trademarks are property of their respective owners.

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
[Eaton.com](https://www.eaton.com)

© 2018 Eaton
All Rights Reserved
Printed in USA
Publication No. CA08307001E / Z20429
February 2018

EATON
Powering Business Worldwide